

# Part 1

 
## OPERATION OF INSTRUMENTS AND CONTROLS—

### Chapter 1-2

#### Keys and Doors

- Keys
- Side doors
- Power windows
- Power back window
- Back door
- Hood
- Fuel tank cap
- Electric moon roof

#### Keys

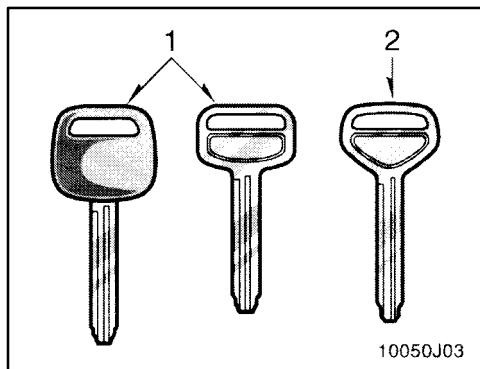


**Your vehicle is supplied with two kinds of key.**

1. Master key—This key works in every lock.
2. Subkey—This key will not work in the glovebox.

To protect things locked in the glovebox when you have your vehicle parked, leave the subkey with the attendant.

 Since the doors can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

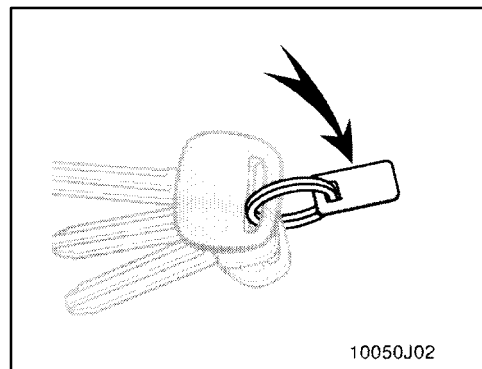


#### KEY NUMBER PLATE

**Your key number is shown on the plate. Keep the plate in a safe place such as your wallet, not in the vehicle.**

If you should lose your keys or if you need additional keys, duplicates can be made by a Toyota dealer using the key number. You should also put a copy of the key number with your important papers.
 
## Side doors

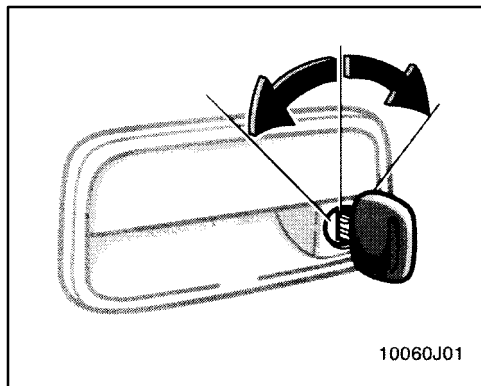


### LOCKING AND UNLOCKING WITH KEY

**Insert the key into the keyhole and turn it.**

To lock: Turn the key forward.

To unlock: Turn the key backward.

 Vehicles with power door lock system—All the side doors and back door lock and unlock simultaneously with either door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all side doors simultaneously.

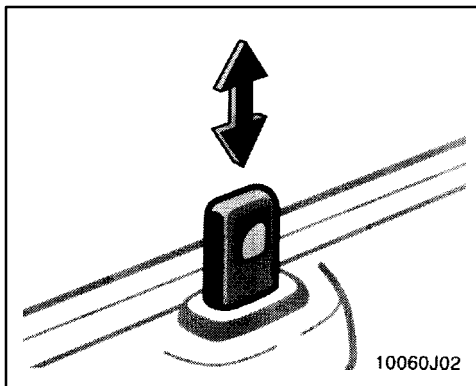

### LOCKING AND UNLOCKING WITH INSIDE LOCK BUTTON

 
**Move the lock button.**

To lock: Push the button downward.


To unlock: Pull the button upward.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle.

Vehicles with power door lock system—The front doors cannot be locked if you leave the key in the ignition switch.

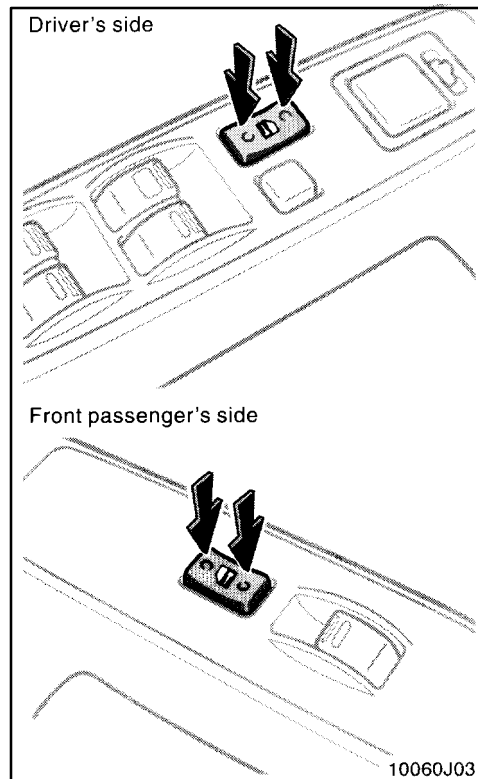

**With power window**

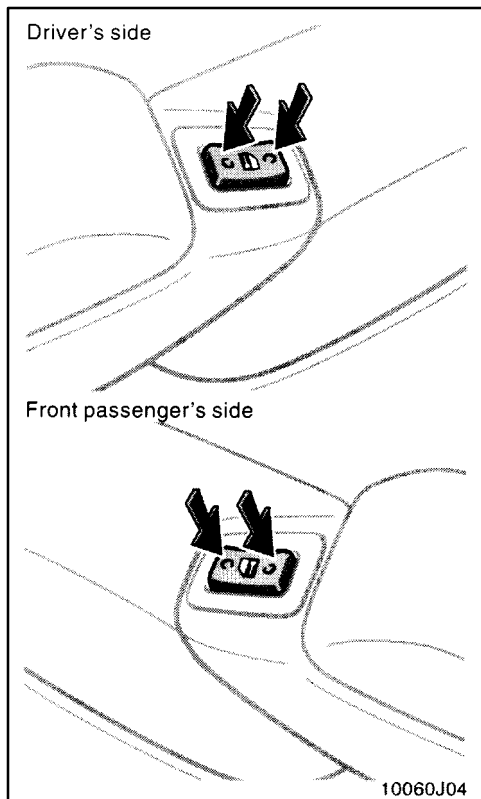 

Without power window


## LOCKING AND UNLOCKING WITH POWER DOOR LOCK SWITCH
 
### Push the switch.

To lock: Push the switch on the front side.

To unlock: Push the switch on the rear side

All the doors lock or unlock simultaneously.

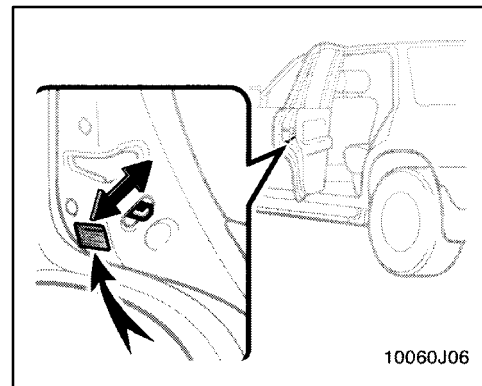

## REAR DOOR CHILD-PROTECTORS

Move the lock lever to the “LOCK” position as shown on the label.

 
This feature allows you to lock a rear door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.



## CAUTION

Before driving, be sure that the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

## Power windows

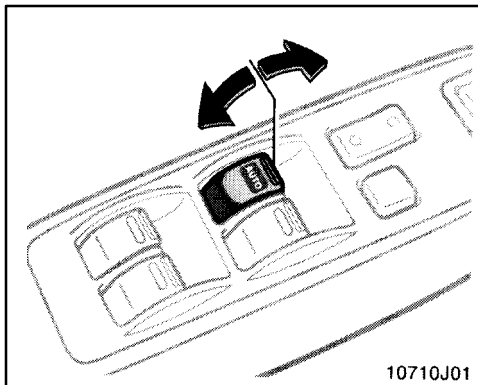

**The windows can be operated with the switch on each door.**

The power windows work when the ignition switch is in the "ON" position. However, if both doors are closed, they work for 60 seconds even after the ignition switch is turned off. They stop working when either front side door is opened.

 
### OPERATING THE DRIVER'S WINDOW

**Use the switch on the driver's door.**

**Normal operation:** The window moves as long as you hold the switch.


To open: Lightly push down the switch.

To close: Pull up the switch.

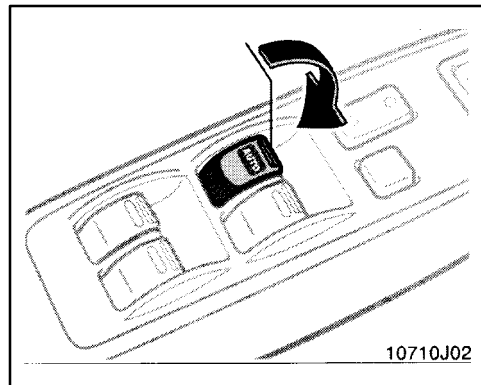

### Automatic operation (to open only):

 Push the switch completely down and then release it. The window will fully open. To stop the window partway, lightly pull the switch up and then release it.

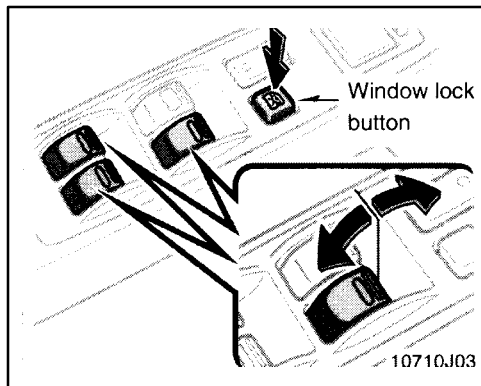

## OPERATING THE PASSENGERS' WINDOWS

 
Use the switch on the passenger's door or the switch on the driver's door that controls the passenger's window.

The windows moves as long as you hold the switch.

To open: Push down the switch.

To close: Pull up the switch.


If you push in the window lock button on the driver's door, the passenger's windows cannot be operated.

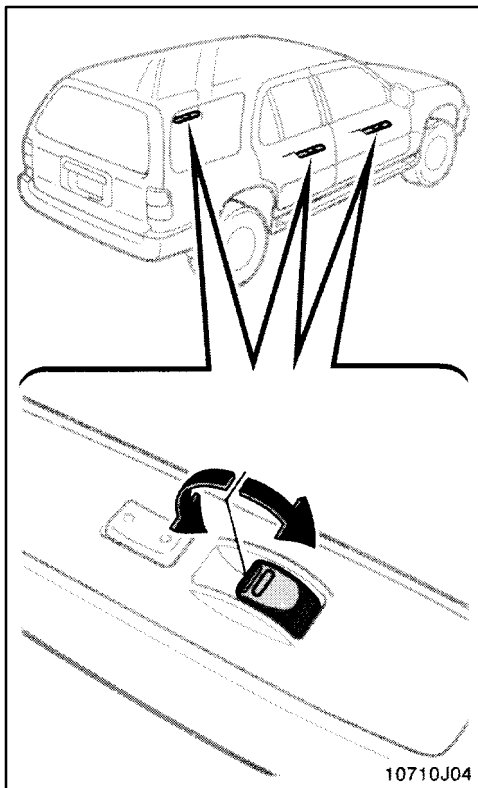

To avoid serious personal injury, you must do the following.

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock button to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.

## Power back window

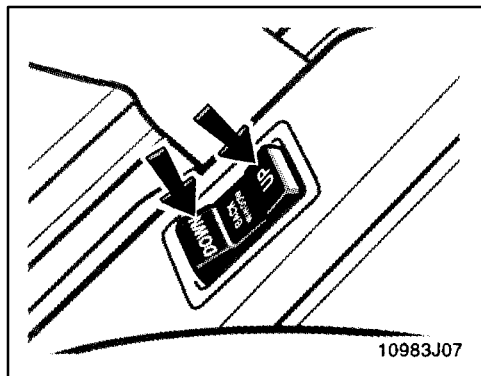 

The back window can be operated with the inner switch on the center console or outer switch on the back door.

### OPERATING FROM INSIDE

The ignition key must be in the "ON" position.

 
The back window moves as long as you hold the inner switch.

To open: Push the switch on the "DOWN" side.


To close: Push the switch on the "UP" side.

You can also open the back window when the back window wiper is working. At that time, the wiper stops working until the window is closed again.


If you push in the window lock button on the driver's door (with power window) or on the instrument panel (without power window), the back window cannot be operated.

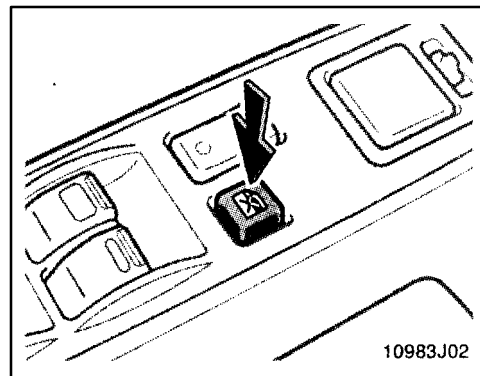

With power window (driver's door)

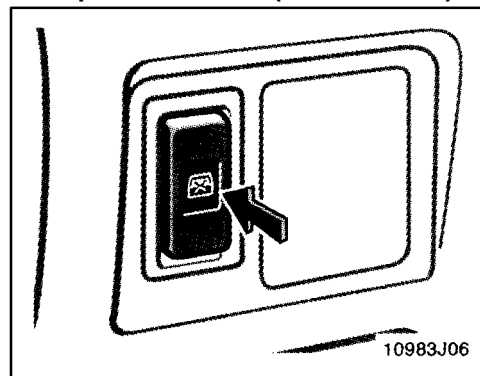 

Without power window (instrument panel)

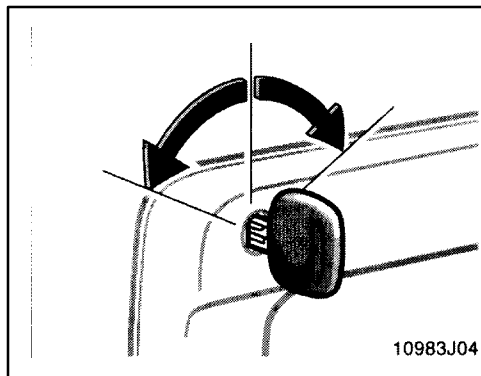 

### OPERATING FROM OUTSIDE

After turning and holding the key for a few seconds. The back window will move as far as holding the key.

To open: Turn the key counterclockwise.

To close: Turn the key clockwise.

You can also open the back window when the back window wiper is working. At the time, the wiper stops working until the window is closed again.

 


**CAUTION**

**To avoid serious personal injury, you must do the following.**

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock button to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.
- Keep the back window closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle.

### Back door

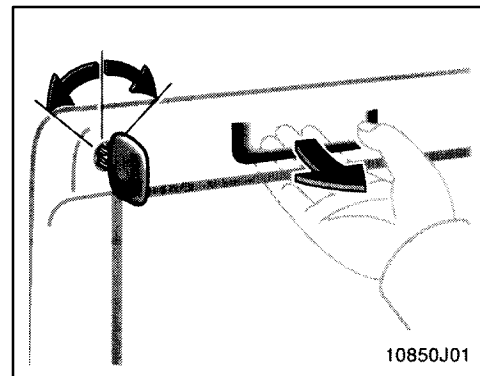

### LOCKING AND UNLOCKING WITH KEY

**Insert the key into the keyhole and turn it.**

To lock: Turn the key clockwise.

To unlock: Turn the key counterclockwise.

The back door will be controlled by operating the power door lock switch.

 
 
When closing the back door, make sure it is fully closed.

See "Luggage storage precautions" in Part 2 for precautions to observe in loading luggage.

 


## CAUTION

Keep the back window and back door closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle.

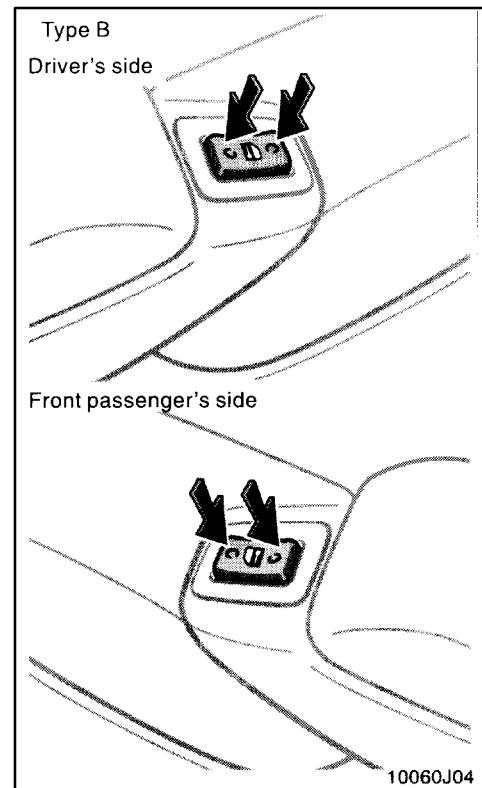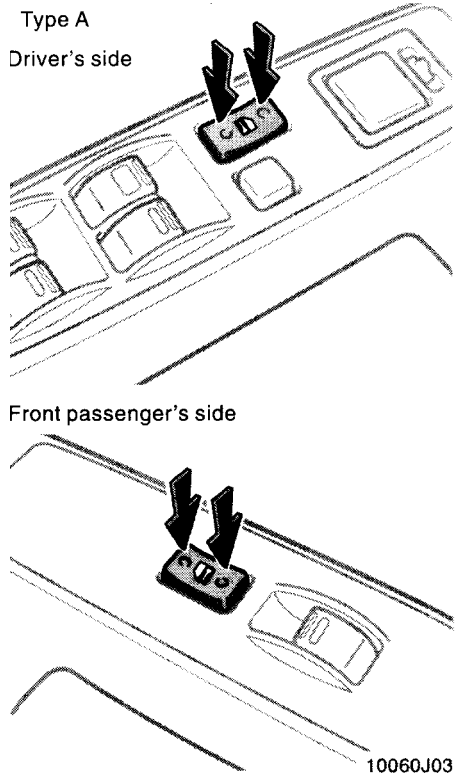



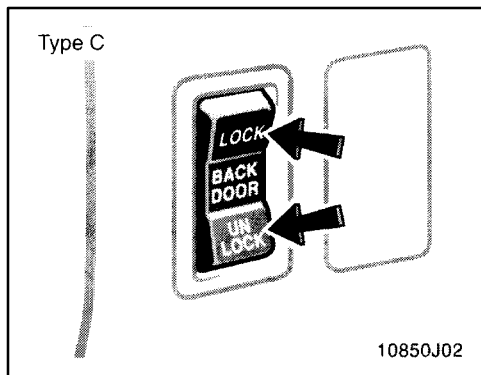

## LOCKING AND UNLOCKING WITH POWER BACK DOOR LOCK SWITCH

 
**Push the switch.**

To lock: Push the switch on the “LOCK” side.

To unlock: Push the switch on the “UN-LOCK” side.


Vehicles with a power door lock system—Operating the power door lock switch simultaneously locks or unlocks the back door (see “Side doors”).

## Hood

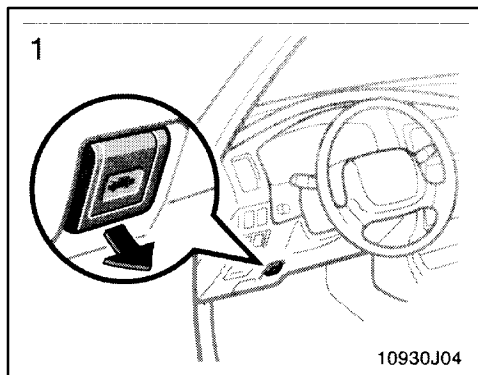


To open the hood, do the following.

 1. Pull the hood lock release lever.  
The hood will spring up slightly.

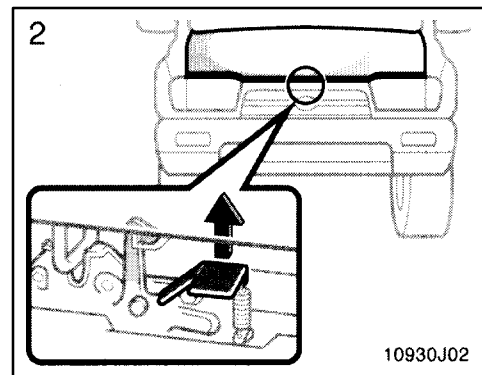

2. In front of the vehicle, pull up on the auxiliary catch lever and lift the hood.

## Fuel tank cap

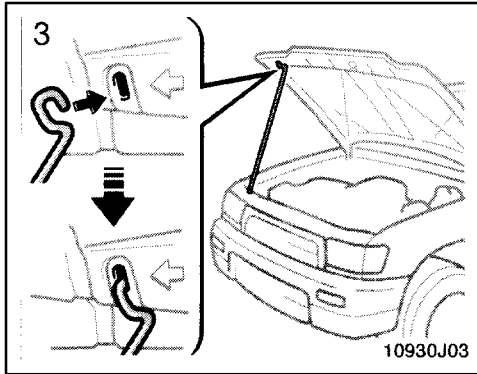 


- 3. Hold the hood open by inserting the support rod into the slot.**

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. and return the support rod to its clip—this prevents rattles. Then lower the hood make sure it locks into place. If necessary, press down gently on the front edge to lock it.




**After inserting the support rod into the slot, make sure the rod supports the hood security.**

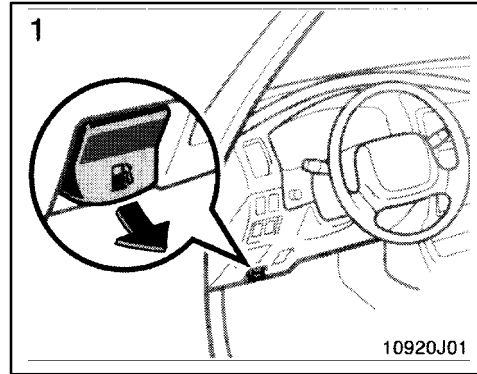 

- 1. To open the fuel filler door, pull the lever up.**



 - **Do not smoke, cause sparks or allow open flames when refuelling. The fumes are flammable.**
- **When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.**

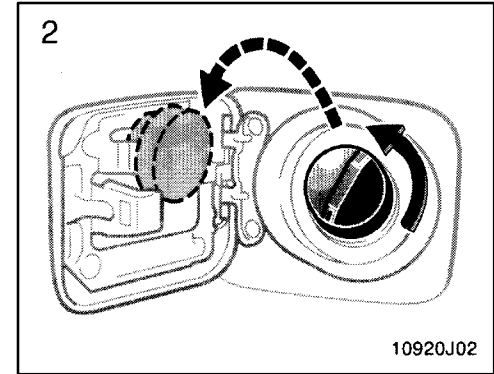

- 2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. After removing the cap, hang it on the cap hanger.**


It is not unusual to hear a slight swoosh when the cap is opened. When installing, turn the cap clockwise till you hear a click. If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely. The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact you toyota dealer as soon as possible.




## CAUTION

 - Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Toyota fuel tank cap for replacement. It has a built in check valve to reduce fuel tank vacuum.

## Electric moon roof

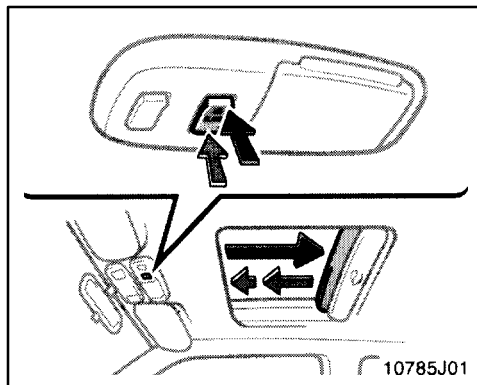

### Sliding operation

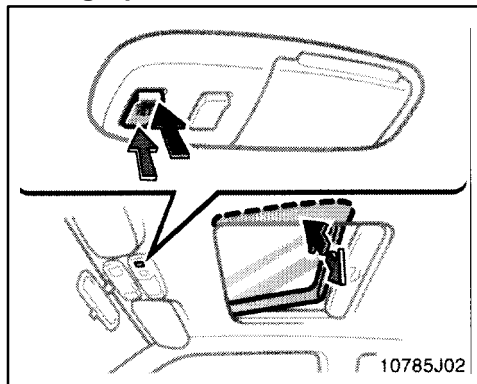 

### Tilting operation

**To operate the moon roof, use the switches beside the interior light.**

The moon roof works when the ignition switch is in the "ON" position. However, if all the doors are closed, it works for 60 seconds even after the ignition switch is turned off. It stops working when any of the doors is opened.

**Sun shade operation—**

The sun shade can be opened or closed by hand.

**Sliding operation—**

To open: Push the switch on the "SLIDE" side.

The sun shade will be opened together with the roof.

To close: Push the switch on the opposite side of the "SLIDE" side.

As a precaution when closing, the roof stops at the three-quarters closed position before fully closing. Therefore, release the switch and then push it again to close it completely.

**Tilting operation—**

To tilt up: Push the switch on the "UP" side.

To lower: Push the switch on the opposite side of the "UP" side.

You may stop the moon roof at any desired position. The roof will move while the switch is being pushed and stop when released.



### **CAUTION**

**To avoid serious personal injury, you must do the following.**

- **While the vehicle is moving, always keep the head, hands and other parts of the body of all occupants away from the roof opening. Otherwise, you could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.**
- **Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands get caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.**

- **Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can become involved in serious accidents.**
- **Never sit on top of the vehicle around the roof opening.**