



Customer Experience Center
1-800-331-4331

COROLLA


2009
Quick Reference Guide

MN 00505-QRG09-COR
Printed in the USA 12/07



Interactive Owner's Guide

Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit www.ToyotaGuide.com. This user-friendly website makes learning all about your new vehicle fun and easy.

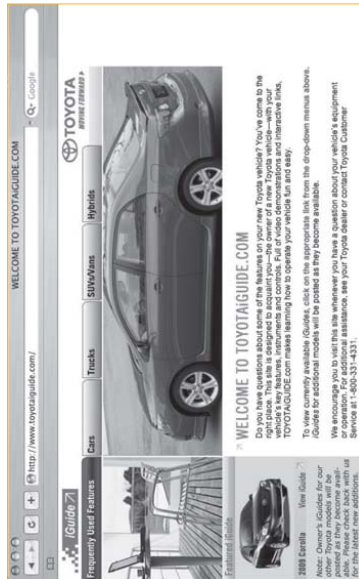


www.ToyotaGuide.com


This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

Spare tire & tools

Tool location

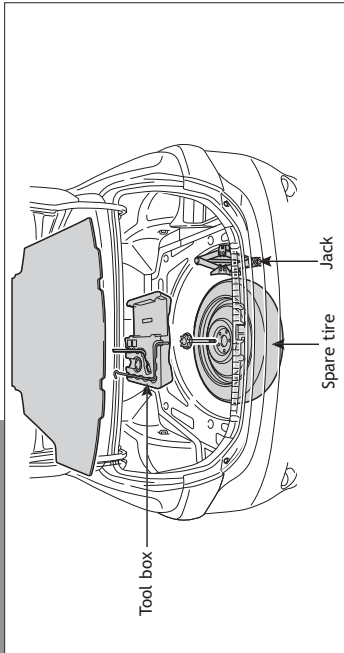

Removing the spare tire

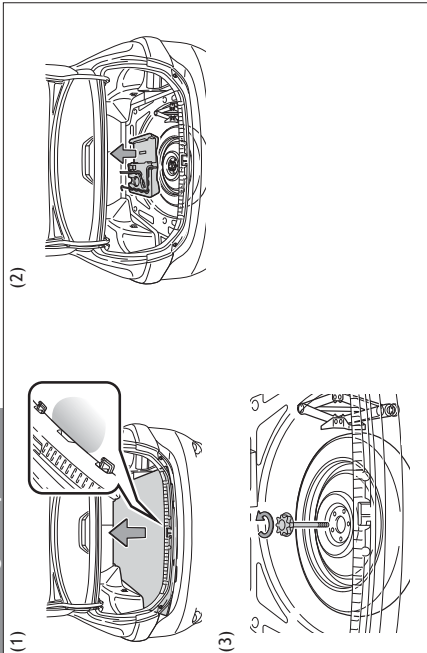

- (1) Remove the luggage floor cover.
 - (2) Remove the tool tray.
 - (3) Loosen the center fastener that secures the spare tire.
- Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

2009 Corolla Quick Reference Guide


OVERVIEW	Engine maintenance	7
	Fuel tank door release and cap	6
	Hood release	7
	Indicator symbols	5
	Instrument cluster	4
	Instrument panel	2-3
	Keyless entry¹	6
FEATURES/OPERATIONS	Air Conditioning/Heating	14
	Audio	12-13
	Auto lock functions²	9
	Automatic Transmission	8
	Auxiliary storage	18
	Clock	16
	Cruise control	15
	Cup holders	18
	Door locks-Power	17
	Light control-Instrument panel	18
	Lights & turn signals	11
	Moonroof	17
	Multi-information display	15
	Parking brake	8
	Power outlets	14
	Seat adjustments-Front	9
	Seat adjustments-Rear	9
	Seats-Head restraints	10
	Telephone controls (Bluetooth®)	16
	Tilt and telescopic steering wheel	17
	Windows-Power	10
	Windshield wipers & washers	10
SAFETY AND	Child comfort guide	19
	Doors-Child safety locks	20
EMERGENCY FEATURES	Seat belts	19
	Seat belts-Shoulder belt adjustment	19
	Spare tire & tools	21
	Tire Pressure Warning System	20
	Trunk-Internal release	20

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

OVERVIEW

Instrument panel

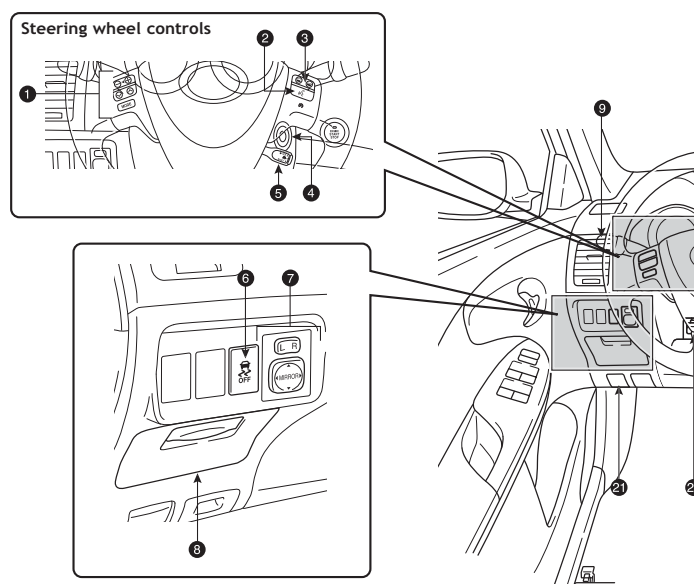

- ❶ Steering wheel audio controls^{1,2}
- ❷ Voice command button¹
- ❸ Telephone controls¹
- ❹ Engine switch (mechanical key)¹
- ❺ Cruise control¹
- ❻ VSC/TRAC OFF switch¹
- ❼ Power rearview mirror control
- ❽ Auxiliary storage
- ❾ Headlight, turn signal and front fog light¹ controls
- ❿ Wiper and washer controls
- ⓫ Emergency flasher button
- ⓬ Audio system²
- ⓭ Air Conditioning controls
- ⓮ Outside rearview mirror¹/Rear window defogger button

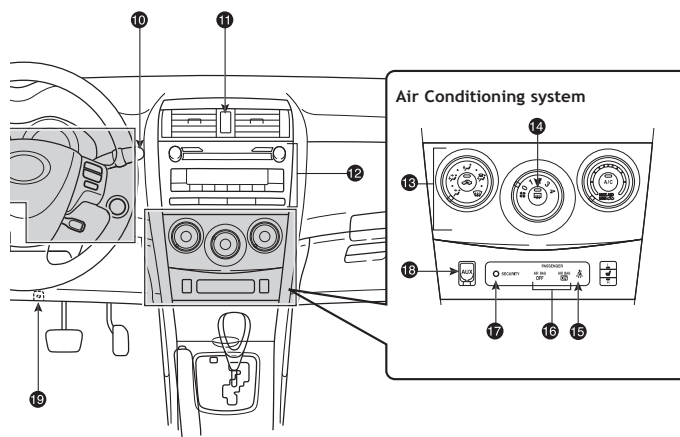

- 13 Front passenger seat belt reminder light
- 14 "AIR BAG ON" and "AIR BAG OFF" indicator
- 15 Engine immobilizer indicator
- 16 AUX adapter
- 17 Tire Pressure Warning System reset
- 18 Tilt and telescopic steering control
- 19 Hood lock release lever


¹ If equipped

² Vehicles with navigation system: for details, refer to the "Navigation System Owner's Manual."


OVERVIEW

Instrument cluster

Optitron type meters

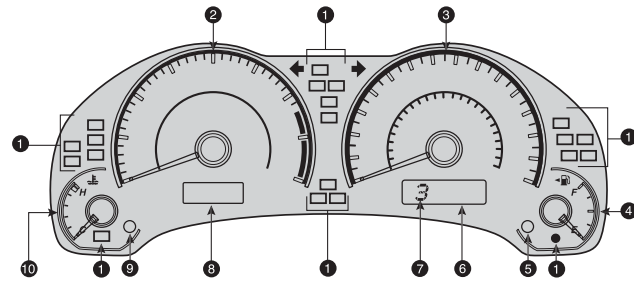



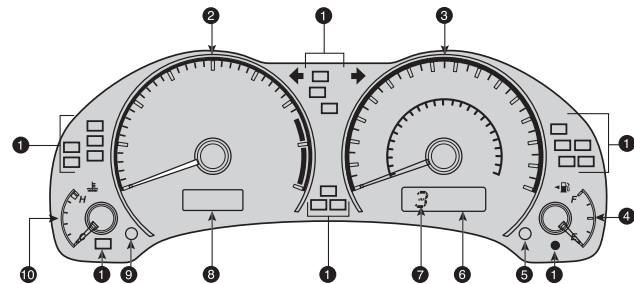

















Non-optitron type meters



- ① Service indicator and reminder
- ② Tachometer
- ③ Speedometer
- ④ Fuel gauge
- ⑤ Trip meter reset/Instrument panel light control
- ⑥ Odometer and two trip meters
- ⑦ Automatic Transmission shift range display (if equipped)
- ⑧ Multi-information display
- ⑨ Display button
- ⑩ Engine coolant temperature

Indicator symbols





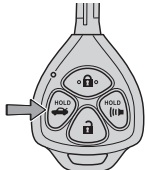

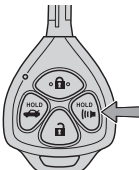

For details, refer to “Indicators and warning lights,” Section 2-2, 2009 Owner’s Manual.

	Brake system warning ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	“AIR BAG ON” and “AIR BAG OFF” indicator ¹
	Electric power steering warning ¹
	Malfunction/Check Engine indicator ¹
	Low fuel level warning
	Open door warning
	SRS Airbag warning ¹
	Low Tire Pressure Warning ¹
	Headlight low/high beam indicator
	Turn signal indicator
	Fog light indicator
	Slip indicator ¹
	Cruise control indicator
	Anti-lock Brake System warning ¹
	“VSC OFF” indicator ¹
	Low engine oil pressure warning ¹
	Engine oil replacement reminder ¹


¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.


OVERVIEW

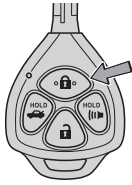Keyless entry (if equipped)


Locking operation	Unlocking operation
 <p>Push </p>	 <p>Push ONCE: Driver door TWICE: All doors </p> <p>NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.</p>
Trunk lid operation	Panic button
 <p>Push and hold </p>	 <p>Push and hold </p>

Fuel tank door release and cap

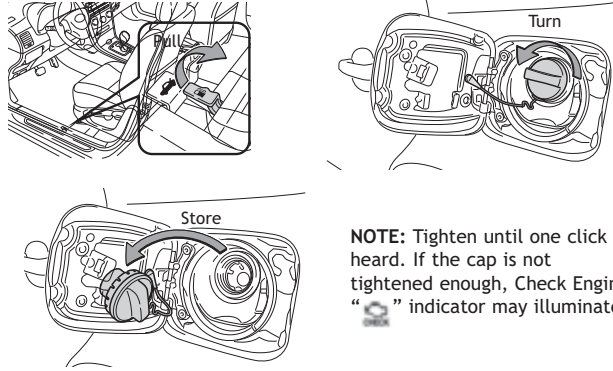


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

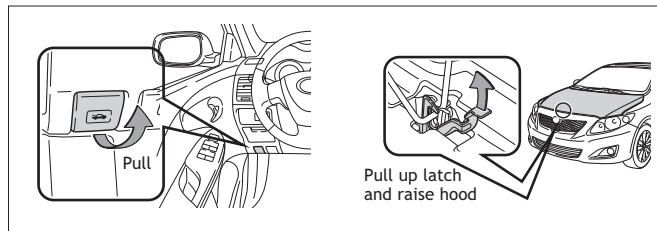

Engine maintenance

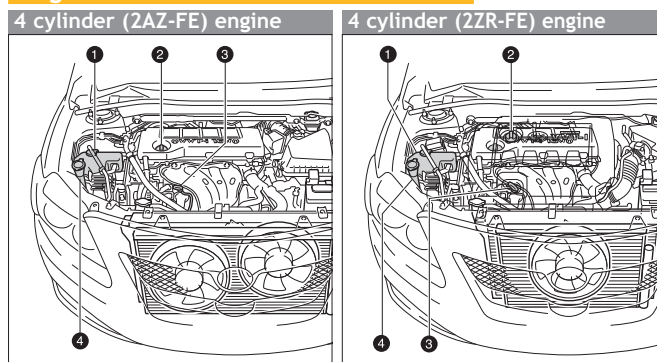


- ① Engine coolant reservoir
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Windshield washer fluid tank

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS

Automatic Transmission (if equipped)

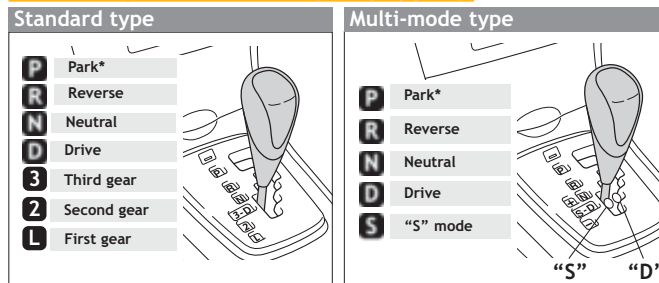

* The ignition switch must be ON, and the brake pedal depressed to shift from "Park."

"S" (Sequential) mode


Shift the shift lever to "S" position from "D" position.

Floor shift type:

- +: Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

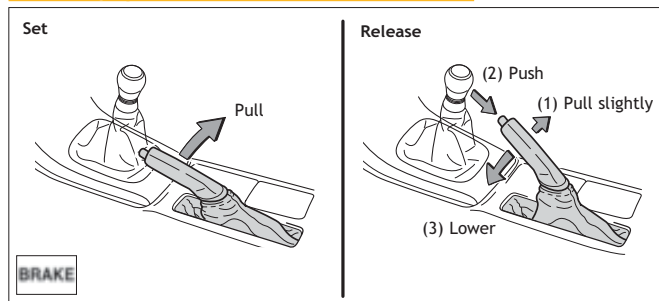

Auto lock functions (if equipped)

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from "Park."
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into "Park."
- Doors unlock when the driver's door is opened within 10 seconds after setting the engine switch or "ENGINE START STOP" switch OFF.

Refer to the *Owner's Manual* for more details.


Seat adjustments-Front

Manual seat




- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle

Seat adjustments-Rear

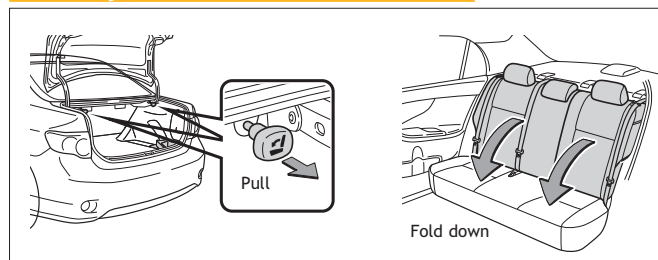


FEATURES/OPERATIONS


Seats-Head restraints

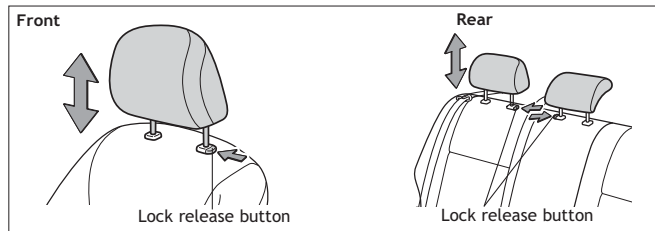

Windshield wipers & washers

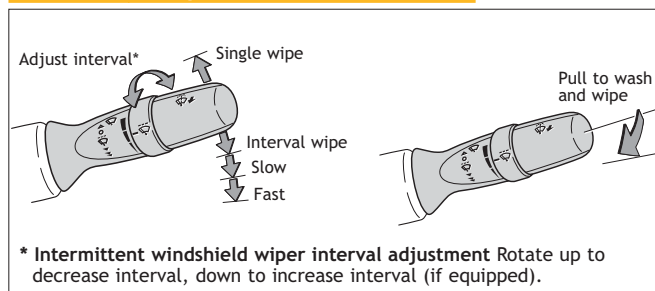

Windows-Power (if equipped)

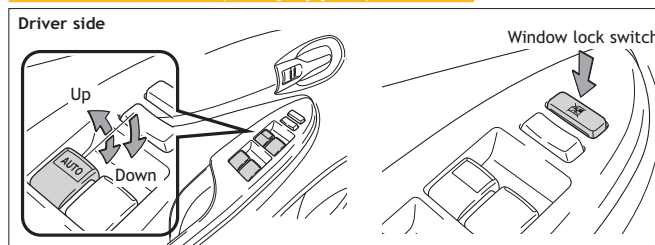


Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Lights & turn signals

Headlights

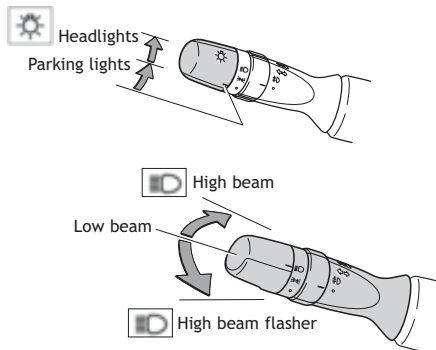


Daytime Running Light system (DRL) Headlights turn on automatically upon starting engine. The brightness of the headlights will automatically change depending on the darkness of the surroundings.

Front fog lights (if equipped)

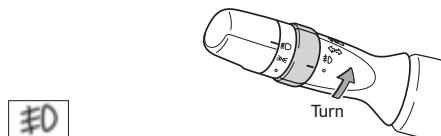


Front fog lights come on only when the headlights are on low beam.

Turn signals

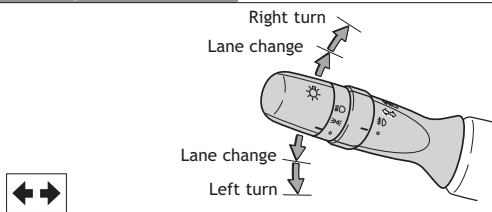

FEATURES/OPERATIONS

Audio

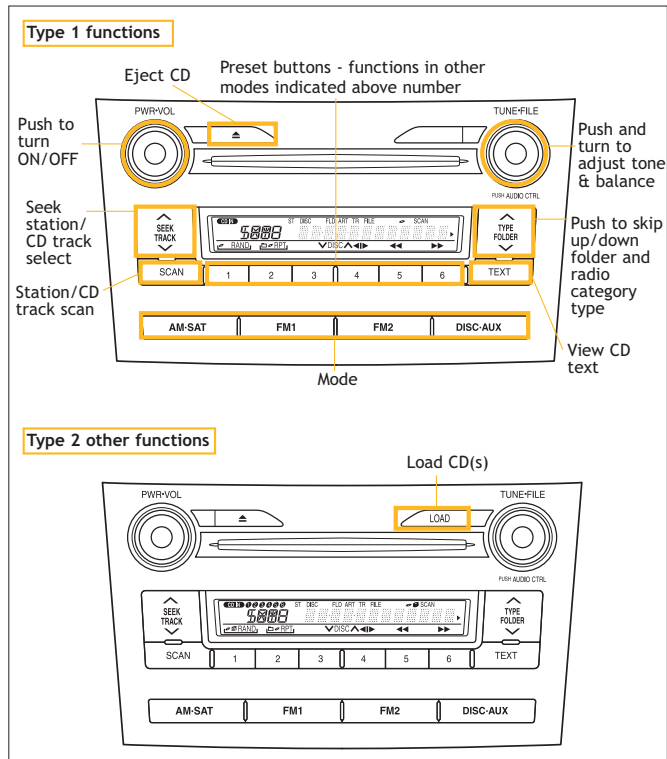

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD changer (Type 2)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.


To select a file (MP3/WMA only) Turn "TUNE·FILE."

RADIO


To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

To scan stations Push and hold "SCAN" to scan preset stations. Push again to hold selection.

AUX audio jack

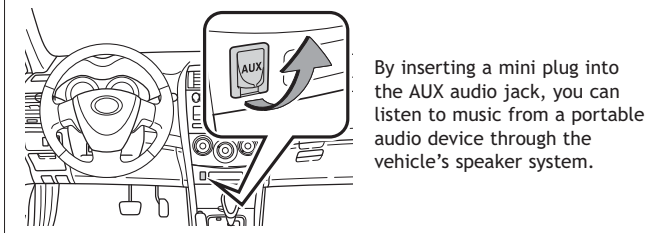

Steering wheel switches (if equipped)

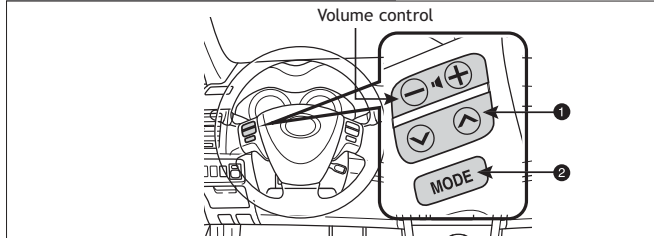

① "V A"

-In **radio mode** Push to select a preset station; push and hold to seek the next strong station.


-In **CD mode** Push to skip up or down to next/previous track.

② "MODE"

Push to turn audio ON and to select an audio mode. Push and hold to turn the audio system "OFF."



FEATURES/OPERATIONS

Air Conditioning/Heating

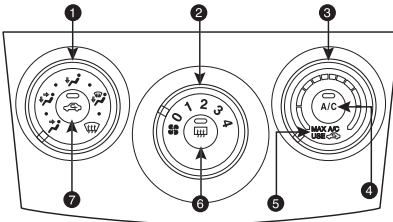

- 1 Airflow vent
In “ ” or “ ” mode, use fresh air (“ ” indicator “OFF”) to reduce window fogging.
- 2 Fan speed
- 3 Temperature
- 4 Air Conditioning ON/OFF
- 5 Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh, or to turn A/C OFF in this mode.
- 6 Outside rearview mirror/Rear window defogger
- 7 Fresh or recirculated cabin air


Power outlets

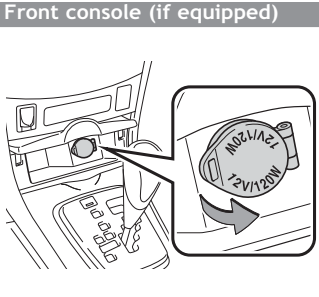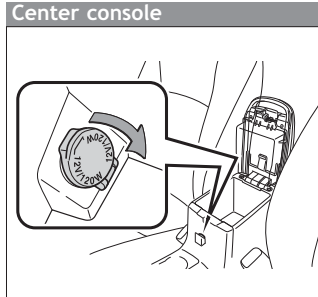Front console (if equipped)	Center console
	


Designed for 12V car accessories.
The engine switch must be in the “ACC” or “ON” position.

Cruise control (if equipped)

Turning system ON/OFF

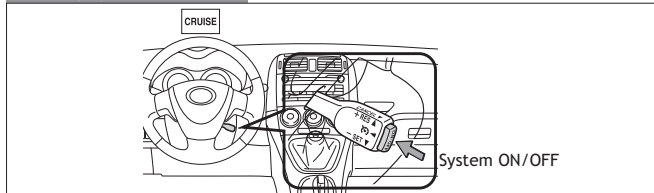


Functions

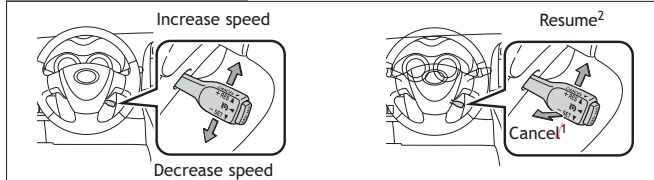

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Multi-information display

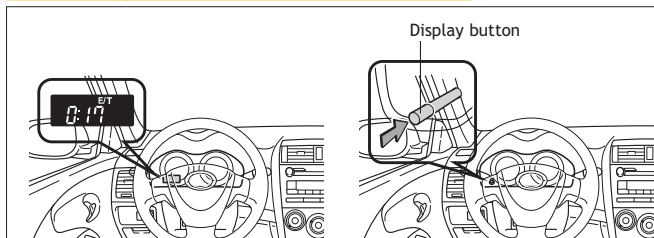


Push the display button to change information in the following:

- (1) Clock
- (2) Outside temperature
- (3) Current gas mileage
- (4) Average gas mileage*
- (5) Miles left on remaining fuel
- (6) Average vehicle speed from engine start*
- (7) Running time from engine start*

* Push and hold display button to reset.

FEATURES/OPERATIONS


Telephone controls (Bluetooth®) (if equipped)

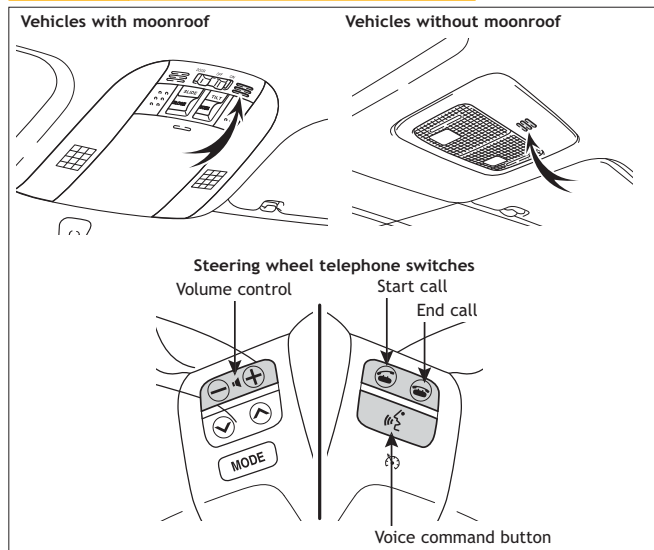

Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to the *Owner's Manual* for more details.

Clock

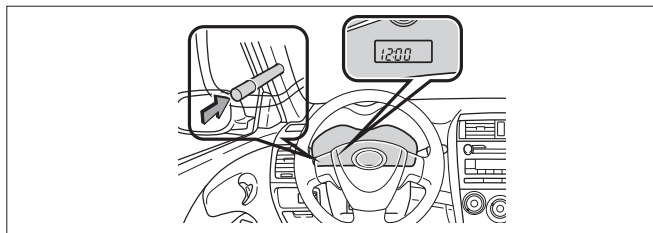


(1) Push and hold the display button to set the clock. (2) While flashing, press button repeatedly to adjust minutes. (3) Wait five seconds to adjust the hour. (4) Wait another five seconds for process to complete.


Moonroof (if equipped)

Sliding operation


Recommended driving position to minimize wind noise.

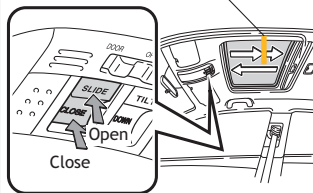

Tilting operation

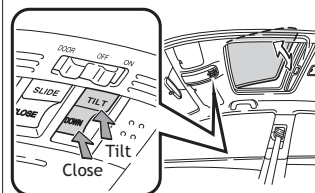


Tilt and telescopic steering wheel

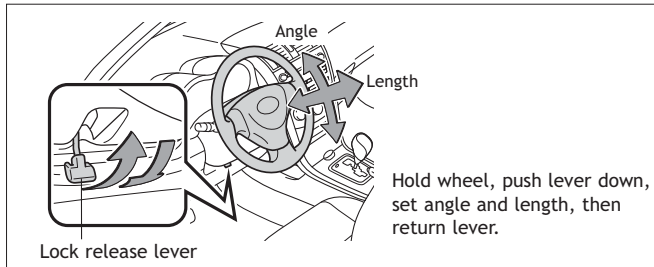


Note: Do not attempt to adjust while the vehicle is in motion.

Door locks-Power(if equipped)

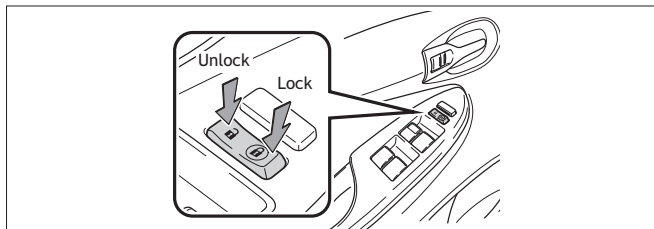


FEATURES/OPERATIONS


Light control-Instrument panel

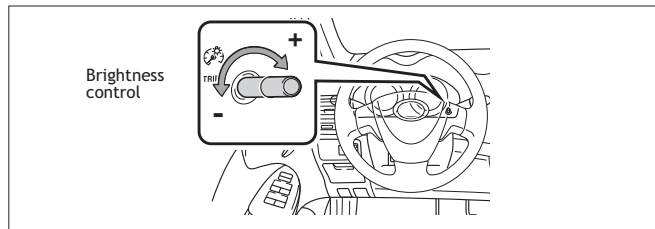


Cup holders

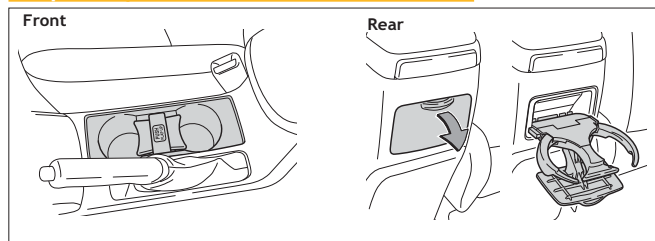

Auxiliary storage

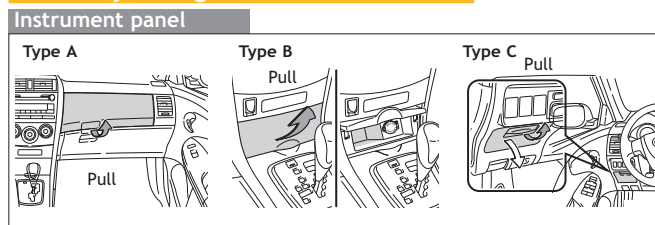


Overhead console

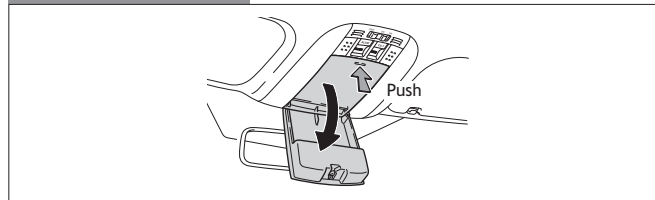

SAFETY AND EMERGENCY FEATURES


Seat belts

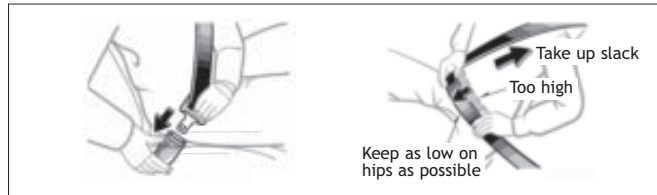


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt adjustment

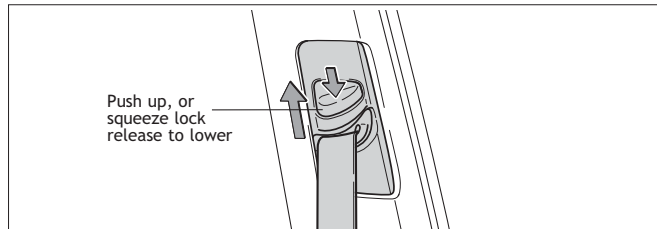

Child comfort guide

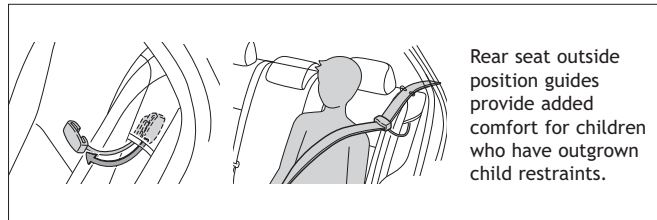


Tire Pressure Warning System

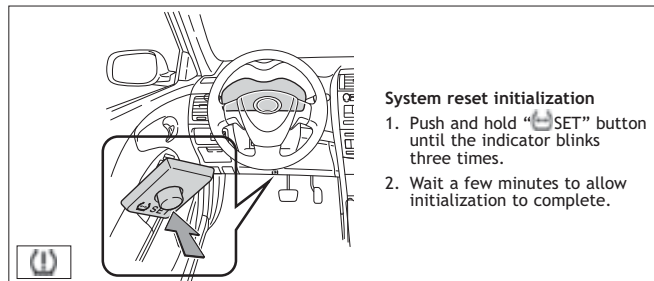


If tire pressure becomes critically low on any of the tires, indicator comes on. Pushing “SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for more details.

Trunk-Internal release

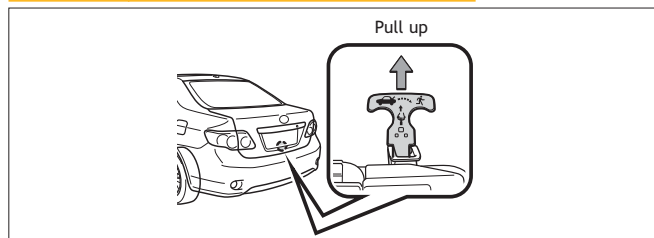

Doors-Child safety locks

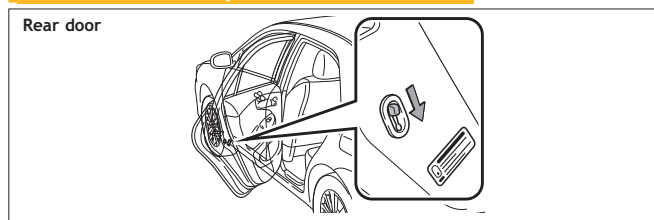

Moving the lever to “LOCK” will allow the door to be opened only from the outside.