

2 0 0 0 0

Scheduled

Maintenance

Guide



Revised 1/00

**INTRODUCTION**

The Importance of Scheduled Maintenance .....2  
 Maintenance and Toyota Warranty Coverage .....3

**TOYOTA MAINTENANCE & REPAIR SUPPORT**

Toyota Dealership Service .....4  
 Toyota Express Lube .....5  
 Genuine Toyota Parts and Accessories .....6  
 Lifetime Guarantee Replacement Parts .....8  
 TrueStart™ Batteries .....9  
 Collision Repair Parts .....10  
 Do-It-Yourself Products .....12  
 Toyota Parts Centers .....14  
 Toyota Service Manuals .....15  
 Service Agreements and Pre-Paid Maintenance .....16

**SCHEDULED MAINTENANCE LOGS**

Determining Your Vehicle's Maintenance Needs .....17  
 Explanation of Maintenance Items .....20  
 Maintenance Log: Cars and Sienna .....24  
 Maintenance Log: SUV's and Trucks .....40  
 Vehicle Identification .....56

## The Importance of Scheduled Maintenance

**R**egular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Toyota. It can also enhance your vehicle's resale value. This booklet is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines along with information on the extensive maintenance and repair support available through Toyota and your dealership. You'll also find space to document your vehicle's maintenance history.

In addition to scheduled maintenance, your Toyota requires ongoing general maintenance which includes checking fluid levels and making periodic visual inspections. These items are explained under the "General Maintenance" heading in the "Vehicle Maintenance and Care" section of the *Owner's Manual*. Be sure to follow these guidelines carefully to ensure the most trouble-free operation of your vehicle.

With proper maintenance and care, your vehicle will last longer and deliver more dependable, economical performance. Follow this booklet's recommendations and you'll enjoy maximum reliability and peace of mind from your Toyota for many years to come.



**TOYOTA** | everyday

## Maintenance & Toyota Warranty Coverage

Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains in force. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The Scheduled Maintenance Log in this booklet is a good place to record this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Toyota will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Toyota will not deny a warranty claim solely because you used a service provider other than a Toyota dealership for maintenance and repairs. However, damage or failures caused by improper maintenance or repairs are not covered under warranty.

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the Scheduled Maintenance Log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the Scheduled Maintenance Log.


For a complete description of Toyota warranty coverages, see the booklet entitled *2000 Owner's Warranty Information* in your vehicle's glove box.

## Toyota Dealership Service

To ensure that your vehicle receives first-quality service and factory-authorized parts, Toyota recommends having maintenance performed by an authorized Toyota dealership.

Toyota dealership technicians are experts in the maintenance and repair of Toyota vehicles. They stay current on the latest service information through Toyota technical bulletins, service publications and training courses. Many are also certified through the Toyota Certified Technician Program, which requires completion of Toyota's specialized, state-of-the-art training as well as rigorous exams through both Toyota and the National Institute for Automotive Service Excellence. Feel free to ask any Toyota dealership to show you its technicians' credentials.

You can be confident you're getting the best possible service for your vehicle when you take it to a Toyota dealership. Why trust your investment to anything but a team of highly qualified Toyota specialists?

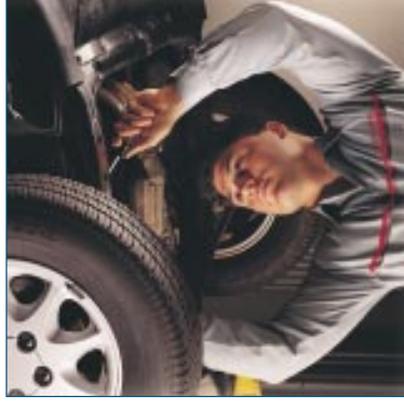

## Toyota Express Lube

With Toyota Express Lube, you get the convenience of a quick-lube shop *and* the quality and expertise you count on when you go to a Toyota dealership. You also get the Express Lube guarantee: in 29 minutes or less from the time of write-up, a complete oil-and-filter change using Genuine Toyota Parts along with a multi-point inspection, or the next one is free.

You never need an appointment to use Express Lube at a Toyota dealership. You'll be waited on promptly and your oil-and-filter change will be done while you wait. Express Lube also delivers outstanding value, since the service is priced very competitively with franchised quick-lube centers.

More than 450 Toyota dealerships now offer Express Lube service. Call (800) 331-4331 for the Express Lube location nearest you.



## Genuine Toyota Parts & Accessories

To safeguard the quality, reliability and value of your vehicle, Toyota recommends using only Genuine Toyota Parts for maintenance and repairs. Like all Toyota products, Genuine Toyota Parts are built to the highest standards of quality and performance. They are also designed to fit your vehicle's exact specifications.

Your Toyota dealership maintains an extensive inventory of Genuine Toyota Parts to meet your vehicle service needs. And because it is linked electronically to Toyota's Parts Distribution Centers, the dealership has quick access to any parts it may not have in stock.

When installed by a Toyota dealership, Genuine Toyota Parts are warranted for 12 months (regardless of mileage) or the remainder of any applicable New Vehicle Limited Warranty, whichever is longer. Selected Toyota replacement parts are covered by a lifetime warranty (see page 8). Non-Genuine Toyota Parts — and any damage or failures resulting from their use — are not covered by any Toyota warranty.

For all your maintenance and repair needs, insist on the quality and peace of mind you only get with Genuine Toyota Parts.




**TOYOTA**  
**GENUINE PARTS**

## Genuine Toyota Parts & Accessories

When you want to personalize your Toyota vehicle, be sure to do it without sacrificing Toyota quality and performance. How? By choosing Genuine Toyota Accessories.

Only Genuine Toyota Accessories are designed and manufactured specifically for Toyota vehicles. In addition, they undergo rigorous testing to ensure first-rate quality, precise fit and long-term durability. Aftermarket accessories don't always meet these same high standards.

The quality of Genuine Toyota Accessories is also backed by the integrity of a Toyota warranty. Coverage is for 12 months from date of purchase, regardless of mileage. If the accessory is installed at the time of new-vehicle purchase, coverage is extended to 36 months/36,000 miles. See your dealer for details. And remember that Genuine Toyota Accessories can only be purchased from an authorized Toyota dealership.

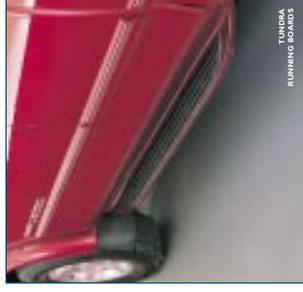

## Lifetime Guarantee Replacement Parts

Toyota's confidence in its products and commitment to customer satisfaction are demonstrated by outstanding warranty coverage — including a lifetime guarantee on replacement mufflers, exhaust pipes, shock absorbers, struts and strut cartridges. When purchased at and installed by a Toyota dealership, these Genuine Toyota Parts are guaranteed to the original purchaser for the life of the vehicle. This includes coverage for parts *and* labor.

Compare the guarantees offered on these parts by aftermarket repair shops — many don't offer the extensive coverage Toyota does. And remember that only Genuine Toyota Parts are manufactured to your vehicle's exact specifications. So don't compromise; when replacement time comes, count on your Toyota dealer for quality, performance and the peace of mind that comes with a factory-backed lifetime guarantee.

*For complete details of the Toyota Lifetime Guarantee, see an authorized Toyota dealer.*

## Compare Lifetime Guarantee Coverage

|                    | Toyota | Others* |
|--------------------|--------|---------|
| • Muffler          | Yes    | Yes     |
| - Labor to replace | Yes    | Yes     |
| • Tail Pipe        | Yes    | No      |
| - Labor to replace | Yes    | No      |
| • Exhaust Pipes    | Yes    | No      |
| - Labor to replace | Yes    | No      |



**Theirs**

**We Cover  
The Muffler,  
Pipes And  
Labor Too!**

**Ours**



\* Some muffler shops—read their fine print and compare.

## TrueStart Batteries

The reputation for quality and reliability was likely a key reason behind your decision to buy a Toyota. That overall quality is present in each of the components of your car or truck, including the battery. When it's time for a replacement, your Toyota dealer is the only place to find a battery with the power to start and operate your vehicle like new.

To maintain the original performance designed into your Toyota, a replacement battery must meet Toyota's specifications for Cold Cranking Amps (CCA) and Reserve Capacity (RC). RC, a specification often not met by aftermarket brands, supplies the power you need during high-demand conditions such as driving in heavy traffic. RC is also what gives you the power to operate electronic accessories with the engine off. By choosing a TrueStart™, you can be confident your battery will meet your needs, every day.

Warranty coverage is another important consideration when selecting a replacement battery. TrueStart™ batteries feature a free replacement period of 18 months (regardless of mileage) or the remainder of the Toyota New Vehicle Limited Warranty,

whichever is longer. Following the free replacement period, warranty coverage is prorated based on the battery's time in use. See your Toyota dealer for more details.

Don't entrust your Toyota's performance to anything less than the best: Genuine Toyota TrueStart™ Batteries.



## Collision Repair Parts

### Insist on Genuine Toyota Quality

If you're involved in a collision, you want your vehicle to be returned to its pre-accident condition when repaired. To maintain your Toyota's value, it's important to make sure it's repaired with Genuine Toyota Parts. Some repair shops and insurance companies may suggest using imitation or used salvage parts to save money. However, these parts do not meet Toyota's high standards for quality, fit and corrosion resistance. In addition, imitation and used salvage parts are not covered by any Toyota warranty (see box at right).

To maintain the appearance, performance and safety of your Toyota, make sure only Genuine Toyota Parts are used for collision repairs. Protect your investment — insist on Genuine Toyota quality.

Toyota warranty coverage remains intact when vehicle repairs are completed with Genuine Toyota Parts. Toyota warranties do not cover imitation or used salvage parts or any damage or failures caused by the use of such parts.

### In Case of Accident, Be an Informed Owner

Toyota believes customers have the right to choose the types of parts used in the repair of their vehicles. That's why Toyota supports full disclosure by repair shops and insurance companies regarding parts used for collision repair. The following information is provided to help you understand the differences in the types of parts that could be used in the repair of your vehicle.

### General Information

"Collision repair parts" or "replacement crash parts" are the parts typically replaced during the repair of a vehicle that has been damaged in a collision. These parts include exterior sheet metal such as fenders, hoods, doors and related components; and plastic components such as bumper covers and lamp assemblies.

## Collision Repair Parts

### Warranty Coverage

Warranties for collision repair parts are provided by the manufacturer or distributor of the parts. Warranty coverage varies. Your insurance company or collision repair facility should provide you with written warranty statements for all parts used in the repair of your vehicle.

### Types of Collision Repair Parts

#### New Original-Equipment Manufacturer (OEM)

Parts that are made by the vehicle manufacturer or one of its licensees and distributed through its normal channels. These parts maintain the manufacturer's vehicle warranty.

#### Aftermarket or Imitation

Parts that are made by companies other than the vehicle manufacturer or its licensees.

#### Recycled or Used Salvage

Used parts and assemblies that have been removed from another vehicle. There are no systems in place to regulate the quality or safety of these parts.

#### Remanufactured

Parts that have been returned to like-new condition through repair, refurbishing or rebuilding.

Due to the critical nature of Supplemental Restraint Systems (also known as air bags), Toyota does not support the use of imitation or used parts for their repair. Only new Genuine Toyota Parts should be used to repair/replace Supplemental Restraint Systems.

## Do-It-Yourself Products

When it's time to replace key wear items on your vehicle, don't settle for less than Genuine Toyota Parts. Available exclusively through Toyota dealerships, Genuine Toyota Parts meet the highest standards of quality and performance and are built to exact factory specifications. Here are a few of your vehicle's components that are particularly subject to wear and some benefits of replacing them with Genuine Toyota Parts.

### Genuine Toyota Platinum Spark Plugs\*

- Designed to last at least 60,000 miles.
- Provide the maximum spark required by Toyota's high-compression engines.
- Resist fouling and misfires for more efficient combustion and better fuel economy.

\* Available for selected models. See your dealer for details.

### Genuine Toyota Brake Pads

- Friction materials selected for optimum performance when matched with Toyota brake drums or rotors.
- Precision-machined backing plates allow pads to move freely within the calipers for smooth, efficient braking.

### Genuine Toyota Wiper Inserts

- Cut to match the exact length and shape of your vehicle's wiper blades for a proper and secure fit.
- Constructed of compression-molded natural rubber — not synthetic — for superior wiping performance.



### **Genuine Toyota Chemicals**

Toyota offers a complete line of products to help you keep your Toyota looking and running like new. To safeguard your vehicle's appearance, you'll find everything from fabric spot remover and glass cleaner to liquid car wash and touch-up paint. When it's time to get under the hood (or under the car), products such as fuel injector cleaner, brake fluid and silicone spray will help you get the job done. All of these products are formulated specifically for use with Toyota vehicles, so you can be confident you're giving your vehicle the best care possible, inside and out.

### **Genuine Toyota Antifreeze Coolant**

Genuine Toyota Long Life Antifreeze Coolant is the same high quality, factory-fill product found in all new Toyotas. You'll know it by its distinctive red color. It provides maximum protection and durability without the use of harmful silicates. And because it's compatible with non-metallic materials, it helps extend the life of water-pump seals. Don't trust your engine to anything less than the best: Genuine Toyota Long Life Antifreeze Coolant.

### **Genuine Toyota Motor Oil**

Your Toyota's engine features highly advanced technology to ensure superior performance, reliability and fuel economy. Genuine Toyota Motor Oil is formulated with a special combination of lube-base stocks and an additive blend to maximize the benefits of this technology. Make sure you're getting the most out of your engine by always putting the best into it: Genuine Toyota Motor Oil.



## Toyota Parts Centers

If you plan to perform your own maintenance or repairs on your Toyota, be sure to check out your nearby Toyota Parts Center (TPC). More than 500 Toyota dealerships now have a TPC, which is an in-dealership parts store offering a wide selection of automotive products. All TPCs feature a complete line of Genuine Toyota maintenance parts and car-care products for “do-it-yourselfers.”

In addition to Toyota maintenance and repair products, TPCs offer free technical advice to Toyota owners who want to service their own vehicles. You'll also find model-specific parts application guides and how-to brochures covering most common maintenance jobs. Both are provided to customers free of charge.

Toyota Parts Centers are open during regular dealership hours; many also have extended evening and weekend hours. If you're a do-it-yourselfer, stop by and experience the service, selection and value offered by your local TPC.



## Toyota Service Manuals

If you'll be doing some of your own maintenance and repair work on your vehicle, a Toyota service manual will be one of your most valuable tools. Toyota offers three types of manuals to assist do-it-yourselfers. To order any of the following manuals, call Toyota's service publications department at (800)622-2033.

### **Vehicle Repair Manual**

This is the same manual used by professional technicians in Toyota dealerships throughout the United States. It is fully illustrated and includes maintenance and repair procedures for all vehicle mechanical systems. It also includes instructions for vehicle tune-ups.

### **Electrical Systems Manual**

This manual provides detailed wiring diagrams for each electrical system in your vehicle, along with troubleshooting tips and repair procedures.

### **Automatic Transmission/Transaxle Repair Manual**

This manual includes complete procedures for overhauling the automatic transmission/transaxle of your vehicle.

For information on basic do-it-yourself maintenance items, see the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of your *Owner's Manual*.



## Service Agreements & Pre-Paid Maintenance



### Extended Service Coverage

A Toyota Motor Insurance Services (TMIS) vehicle service agreement provides protection against unexpected repairs for mechanical breakdown beyond the factory warranty. It also protects you from increases in the cost of covered repairs. In addition, many TMIS plans include benefits such as towing, substitute transportation and travel protection with lodging and meals.

Because they are factory-backed, TMIS service agreements are accepted at all Toyota dealerships in the United States and Canada. That means repairs are made only by factory-trained technicians using Genuine Toyota Parts.

TMIS offers several levels of service agreement coverage, each with a variety of time and mileage options. Your Toyota dealer can help you select the coverage that best meets your needs.

### Pre-Paid Maintenance

An excellent way to make sure your Toyota receives the recommended maintenance — and to protect yourself from increases in vehicle service costs — is to pay for maintenance services in advance.

Toyota Auto Care pre-paid maintenance plans are available for both new and used vehicles. Benefits include oil-and-filter changes, lubrication of key chassis parts and a 19-point vehicle inspection at each service interval. In addition, you receive 24-hour roadside assistance, timed service reminders and a computerized history of each service visit. The Premium Plan (available for new vehicles) also includes tire rotations and factory-recommended maintenance at service intervals of 15,000, 30,000 and 45,000 miles.

Toyota Auto Care plans offer two coverage levels as well as several options for service intervals, time and mileage. Ask your Toyota dealer to help you select the options that are best for you.

Toyota Financial Services is a servicemark used by Toyota Motor Insurance Services, Inc.

## Determining Your Vehicle's Maintenance Needs

### Determining the Proper Maintenance Interval

Depending on your circumstances, you should obtain maintenance for your Toyota every 5,000 miles or every 7,500 miles. Follow these guidelines to determine which interval to use.

#### 5,000-Mile Intervals

Use 5,000-mile intervals if you primarily operate your vehicle under any of the following conditions:

- Driving on unpaved or dusty roads.
- Towing a trailer or using a camper or car-top carrier.
- Repeated trips of less than five miles in temperatures below freezing.

#### 7,500-Mile Intervals

Use 7,500-mile intervals if you primarily operate your vehicle under conditions other than those listed above.

### Following the Maintenance Log Charts

The Scheduled Maintenance Log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of 1,250 miles per month. If you drive more than 1,250 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

If you choose 5,000-mile intervals, follow the maintenance instructions shown below non-shaded headings such as this one:

|                         |
|-------------------------|
| 5,000 Miles or 4 Months |
|-------------------------|

If you choose 7,500-mile intervals, follow the maintenance instructions shown below shaded headings such as this one:

|                         |
|-------------------------|
| 7,500 Miles or 6 Months |
|-------------------------|

At 15,000-mile increments, the 5,000-mile and 7,500-mile intervals coincide. Therefore, shaded and non-shaded headings appear together, as in this example:

|                           |
|---------------------------|
| 15,000 Miles or 12 Months |
| 15,000 Miles or 12 Months |

## Determining Your Vehicle's Maintenance Needs

### Special Operating Conditions

In addition to standard maintenance items, the Scheduled Maintenance Log indicates services that should be performed on vehicles that are driven under especially demanding conditions. Specific conditions require specific services, as indicated below. The Scheduled Maintenance Log indicates at which mileage/time intervals each service should be performed.

You should perform these additional maintenance services if you drive *primarily* under any of the conditions noted. If you drive only occasionally under these conditions, it is not necessary to perform the additional services.

#### Driving on Rough, Muddy or Snow-Melted Roads

- Rotate tires
- Inspect ball joints and dust cover
- Inspect brake linings/drums and brake pads/discs
- Inspect drive shaft boots
- Inspect nuts and bolts on chassis and body

- Inspect steering linkage
- Re-torque drive shaft bolt\*
- Lubricate propeller shaft and re-torque bolt\*

#### Driving on Salt-Covered Roads

- Lubricate propeller shaft and re-torque bolt\*

#### Driving on Unpaved or Dusty Roads

- Inspect brake linings/drums and brake pads/discs
- Inspect or change engine air filter
- Lubricate propeller shaft and re-torque bolt\*

#### Extensive Idling or Low-Speed Driving for Long Distances

- Inspect brake linings/drums and brake pads/discs

---

\* Applies to selected models. See the Scheduled Maintenance Log for details.

## Determining Your Vehicle's Maintenance Needs

### Towing a Trailer or Using a Camper or Car-Top Carrier

- Inspect brake linings/drums and brake pads/discs
- Inspect nuts and bolts on chassis and body
- Replace differential oil
- Replace transmission fluid or oil
- Replace transfer oil\*
- Lubricate propeller shaft and re-torque bolt\*

### Off-Road Maintenance

If you own a Land Cruiser or a four-wheel drive RAV4, Tacoma, Tundra or 4Runner, you should check the following items daily whenever you drive off-road through deep sand, mud or water:

- Brake lines and hoses
- Brake linings/drums and brake pads/discs
- Engine air filter
- Differential oil
- Steering wheel, linkage and boots
- Transfer oil
- Transmission fluid or oil
- Wheel bearings

For all four-wheel drive vehicles except RAV4, you should also lubricate the propeller shafts daily.

## Explanation of Maintenance Items

The following descriptions are provided to give you a better understanding of the maintenance items that should be performed on your vehicle. The Scheduled Maintenance Log indicates at which mileage/time intervals each item should be performed. Please note that many maintenance items should be performed only by a qualified technician.

For further information on maintenance items you can perform yourself, see the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of your *Owner's Manual*.

### **Automatic Transmission Fluid or Manual Transmission Oil**

Inspect each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

### **Ball Joints and Dust Covers**

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. A qualified technician should perform these inspections.

### **Brake Lines and Hoses**

Visually inspect for proper installation. Check for chafing, cracks, deterioration and evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

## Explanation of Maintenance Items

### **Brake Linings/Drums and Brake Pads/Disks**

Check the brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check the pads for excessive wear and the discs for runout, excessive wear and fluid leakage. A qualified technician should perform these inspections.

### **Charcoal Canister (CA, MA and NY vehicles)**

Check for internal damage and clogging. If necessary, clean with compressed air or replace. A qualified technician should perform these operations.

### **Differential Oil**

Inspect each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

### **Drive Belts**

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

### **Drive Shaft Boots**

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any damaged parts and, if necessary, repack the grease. Selected models also require periodic inspection of the drive shaft bolt for proper torque. A qualified technician should perform these operations.

### **Engine Air Filter**

Check for damage, excessive wear and oiliness. Replace if necessary.

### **Engine Coolant**

Drain and flush the cooling system and refill with an ethylene glycol type coolant. A qualified technician should perform this operation.

### **Engine Oil and Oil Filter**

Change the oil filter and replace the engine oil with API SJ, Energy-Conserving II multigrade or ILSAC multigrade oil. For recommended viscosity, refer to your *Owner's Manual*.

## Explanation of Maintenance Items

### **Engine Valves**

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

### **Exhaust Pipes and Mountings**

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

### **Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses**

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

### **Fuel Tank Cap Gasket**

Visually inspect for cracks, deterioration and damage and replace if necessary.

### **Nuts and Bolts on Chassis and Body**

Re-tighten the seat mounting bolts and front/rear suspension member retaining bolts to specified torque.

### **Propeller Shaft**

Lubricate the propeller shaft spiders and slide yokes with lithium-base chassis grease and the double cardan joint with molybdenum-disulfide lithium-base chassis grease, and re-torque the bolt. Only a qualified technician should re-torque the bolt.

### **Spark Plugs**

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

### **Steering Gear Box**

Inspect for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

### **Steering Wheel, Linkage and Boots**

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

### **Timing Belt**

Replace every 90,000 miles. A qualified technician should perform this operation.

### **Tire Rotation**

Tires should be rotated according to the instructions in the *Owner's Manual*. When rotating tires, check for damage and uneven wear.

### **Transfer Case Oil**

Inspect each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

### **Wheel Bearing and Drive Shaft Bearing Grease**

Repack the wheel bearings with wheel bearing grease and the front drive shaft bearings with molybdenum-disulfide lithium-base chassis grease. A qualified technician should perform these operations.

# Maintenance Log: Cars & Sienna

- 5,000-Mile Maintenance Intervals**
- 7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**5,000 Miles or 4 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**10,000 Miles or 8 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**7,500 Miles or 6 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: Cars & Sienna

| 15,000 Miles or 12 Months   |
|---|
| 15,000 Miles or 12 Months   |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following:<br>___ Ball joints and dust covers                   ___ Exhaust pipes and mountings<br>___ Brake lines and hoses                     ___ Steering gear box<br>___ Brake linings/drums and brake pads/discs   ___ Steering wheel, linkage and boots<br>___ Drive shaft boots<br><b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Inspect differential oil <sup>1</sup><br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |

**TOYOTA**  
**GENUINE PARTS**

<sup>1</sup> Applies to Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**20,000 Miles or 16 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**25,000 Miles or 20 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**22,500 Miles or 18 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: Cars & Sienna

|   |
|---|
| <b>30,000 Miles or 24 Months</b>  |
| <b>30,000 Miles or 24 Months</b>  |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following:<br>— Ball joints and dust covers<br>— Brake lines and hoses<br>— Brake linings/drums and brake pads/discs<br>— Differential oil<br>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses<br>— Drive shaft boots<br>— Exhaust pipes and mountings<br>— Fuel tank cap gasket<br>— Steering gear box<br>— Steering wheel, linkage and boots<br>— Transmission fluid or oil<br><b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Replace differential oil <sup>1</sup><br><input type="checkbox"/> Replace manual transmission oil |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |



<sup>1</sup> Applies to all models with manual transmission and Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**35,000 Miles or 28 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**40,000 Miles or 32 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**37,500 Miles or 30 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: Cars & Sienna

|  |
|--|
| <b>45,000 Miles or 36 Months</b>   |
| <b>45,000 Miles or 36 Months</b>   |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following:<br>___ Ball joints and dust covers                      ___ Exhaust pipes and mountings<br>___ Brake lines and hoses                              ___ Steering gear box<br>___ Brake linings/drums and brake pads/discs     ___ Steering wheel, linkage and boots<br>___ Drive shaft boots<br><b>Additional Maintenance Items for Special Operating Conditions: *</b><br><input type="checkbox"/> Inspect automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Inspect differential oil <sup>1</sup><br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |



<sup>1</sup> Applies to Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**50,000 Miles or 40 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**55,000 Miles or 44 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**52,500 Miles or 42 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: Cars & Sienna

|   |
|---|
| <b>60,000 Miles or 48 Months</b>  |
| <b>60,000 Miles or 48 Months</b>  |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Replace platinum spark plugs (Camry, Camry Solara, Sienna) <sup>1</sup><br><input type="checkbox"/> Inspect the following:<br>— Ball joints and dust covers<br>— Brake lines and hoses<br>— Brake linings/drums and brake pads/discs<br>— Charcoal canister (Sienna) <sup>2</sup><br>— Differential oil<br>— Drive belts <sup>3</sup><br>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses<br><br><b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid<br><input type="checkbox"/> Replace differential oil<br><input type="checkbox"/> Replace manual transmission oil |

|                                    |                |
|------------------------------------|----------------|
| <b>DEALER SERVICE VERIFICATION</b> | Date: _____    |
|                                    | Mileage: _____ |



<sup>1</sup> Required under the terms of the Emission Control Warranty.  
<sup>2</sup> Inspect at 60,000 miles or 72 months, whichever comes first.  
 Required only for vehicles in California, Massachusetts and New York.  
<sup>3</sup> Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

# Maintenance Log: Cars & Sienna

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**65,000 Miles or 52 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**70,000 Miles or 56 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**67,500 Miles or 54 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: Cars & Sienna

|   |
|---|
| <b>75,000 Miles or 60 Months</b>  |
| <b>75,000 Miles or 60 Months</b>  |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Ball joints and dust covers</li> <li>___ Brake lines and hoses</li> <li>___ Brake linings/drums and brake pads/discs</li> <li>___ Drive belts</li> <li>___ Drive shaft boots</li> <li>___ Exhaust pipes and mountings</li> <li>___ Steering gear box</li> <li>___ Steering wheel, linkage and boots</li> </ul> |
| <b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Inspect differential oil <sup>1</sup><br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body   |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |

**TOYOTA**  
**GENUINE PARTS**

<sup>1</sup> Applies to Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

- 5,000-Mile Maintenance Intervals**
- 7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**80,000 Miles or 64 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**85,000 Miles or 68 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**82,500 Miles or 66 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: Cars & Sienna

| 90,000 Miles or 72 Months   |
|---|
| 90,000 Miles or 72 Months   |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Replace timing belt (Avalon, Camry, Camry Solara, Sienna)<br><input type="checkbox"/> Inspect the following:<br>— Ball joints and dust covers<br>— Brake lines and hoses<br>— Brake linings/drums and brake pads/discs<br>— Differential oil<br>— Drive belts<br>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses<br><input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br>— Drive shaft boots<br>— Exhaust pipes and mountings<br>— Fuel tank cap gasket<br>— Steering gear box<br>— Steering wheel, linkage and boots<br>— Transmission fluid or oil<br><b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Replace differential oil <sup>1</sup><br><input type="checkbox"/> Replace manual transmission oil |

|   |                               |
|---|-------------------------------|
| <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">DEALER SERVICE VERIFICATION</div> | Date: _____<br>Mileage: _____ |
|---|-------------------------------|

# TOYOTA

## QUALITY SERVICE

<sup>1</sup> Applies to all models with manual transmission and Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

- 5,000-Mile Maintenance Intervals**
- 7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**95,000 Miles or 76 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**100,000 Miles or 80 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

**97,500 Miles or 78 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_  
Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: Cars & Sienna

|   |
|---|
| <b>105,000 Miles or 84 Months</b>   |
| <b>105,000 Miles or 84 Months</b>   |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Ball joints and dust covers</li> <li>___ Brake lines and hoses</li> <li>___ Brake linings/drums and brake pads/discs</li> <li>___ Drive belts</li> <li>___ Drive shaft boots</li> <li>___ Exhaust pipes and mountings</li> <li>___ Steering gear box</li> <li>___ Steering wheel, linkage and boots</li> </ul> |
| <b>Additional Maintenance Items for Special Operating Conditions:*</b><br><input type="checkbox"/> Inspect automatic transmission fluid (Avalon, Camry, Camry Solara, Corolla, Sienna)<br><input type="checkbox"/> Inspect differential oil <sup>1</sup><br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body   |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |



<sup>1</sup> Applies to Avalon, Camry, Camry Solara, Corolla and Sienna models with automatic transmission.

# Maintenance Log: Cars & Sienna

**5,000-Mile Maintenance Intervals**

**7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**110,000 Miles or 88 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**115,000 Miles or 92 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**112,500 Miles or 90 Months**

Replace engine oil and oil filter

Rotate tires (except MR2 Spyder)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: Cars & Sienna

| 120,000 Miles or 96 Months   |   |
|--|---|
| 120,000 Miles or 96 Months   |   |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Rotate tires (except MR2 Spyder)<br><input type="checkbox"/> Replace air conditioning filter (Avalon)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>— Ball joints and dust covers</li> <li>— Brake lines and hoses</li> <li>— Brake linings/drums and brake pads/discs</li> <li>— Charcoal canister (Sienna)<sup>2</sup></li> <li>— Differential oil</li> <li>— Drive belts</li> <li>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> </ul> | <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Replace spark plugs (all models) <sup>1</sup><br><br><ul style="list-style-type: none"> <li>— Drive shaft boots</li> <li>— Engine valve clearance</li> <li>— Exhaust pipes and mountings</li> <li>— Fuel tank cap gasket</li> <li>— Steering gear box</li> <li>— Steering wheel, linkage and boots</li> <li>— Transmission fluid or oil</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid<br><input type="checkbox"/> Replace differential oil<br><input type="checkbox"/> Replace manual transmission oil  |   |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



<sup>1</sup> Required under the terms of the Emission Control Warranty.  
<sup>2</sup> Inspect at 120,000 miles or 144 months, whichever comes first.  
 Required only for vehicles in California, Massachusetts and New York.

# Maintenance Log: SUVs & Trucks

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**5,000 Miles or 4 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**10,000 Miles or 8 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**7,500 Miles or 6 Months**

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: SUVs & Trucks

| 15,000 Miles or 12 Months   |
|---|
| 15,000 Miles or 12 Months   |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Automatic transmission fluid (Tundra)</li> <li>___ Ball joints and dust covers</li> <li>___ Brake lines and hoses</li> <li>___ Brake linings/drums and brake pads/discs</li> <li>___ Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (all 4WD except RAV4)</li> <li>___ Limited-slip differential oil (Land Cruiser, 4WD RAV4)<sup>1</sup></li> <li>___ Rear differential oil (all models except 2WD RAV4)</li> <li>___ Steering gear box</li> <li>___ Steering wheel, linkage and boots</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect automatic transmission fluid (Land Cruiser, RAV4, Tacoma, 4Runner)<br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect front differential oil (2WD and 4WD RAV4)<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid (Tundra)<br><input type="checkbox"/> Replace front differential oil (all 4WD except RAV4)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)  |

|                             |                               |
|-----------------------------|-------------------------------|
| DEALER SERVICE VERIFICATION | Date: _____<br>Mileage: _____ |
|-----------------------------|-------------------------------|

TOYOTA  
GENUINE PARTS

<sup>1</sup> If vehicle is equipped with limited-slip differential.

# Maintenance Log: SUVs & Trucks

**5,000-Mile Maintenance Intervals**

**7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**20,000 Miles or 16 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**25,000 Miles or 20 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**22,500 Miles or 18 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

| 30,000 Miles or 24 Months   |
|---|
| 30,000 Miles or 24 Months   |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace limited-slip differential oil (Land Cruiser) <sup>1</sup><br><input type="checkbox"/> Replace non-platinum spark plugs (Tacoma, Tundra, 4Runner) <sup>2</sup><br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Lubricate wheel bearings (Tacoma 2WD)<br><input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>— Ball joints and dust covers</li> <li>— Brake lines and hoses</li> <li>— Brake linings/drums and brake pads/discs</li> <li>— Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>— Exhaust pipes and mountings</li> <li>— Front differential oil</li> <li>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>— Fuel tank cap gasket</li> <li>— Limited-slip differential oil (4WD RAV4)<sup>1</sup></li> <li>— Rear differential oil (all models except 2WD RAV4)</li> <li>— Steering gear box</li> <li>— Steering wheel, linkage and boots</li> <li>— Transfer case oil (4WD models)</li> <li>— Transmission fluid or oil</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace front differential oil (2WD RAV4 and all 4WD)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)<br><input type="checkbox"/> Replace transmission fluid or oil  |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



<sup>1</sup> If vehicle is equipped with limited-slip differential.

<sup>2</sup> Required under the terms of the Emission Control Warranty.

# Maintenance Log: SUVs & Trucks

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**35,000 Miles or 28 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**40,000 Miles or 32 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**37,500 Miles or 30 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

|   |
|---|
| <b>45,000 Miles or 36 Months</b>  |
| <b>45,000 Miles or 36 Months</b>  |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Automatic transmission fluid (Tundra)</li> <li>___ Ball joints and dust covers</li> <li>___ Brake lines and hoses</li> <li>___ Brake linings/drums and brake pads/discs</li> <li>___ Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil (all 4WD except RAV4)</li> <li>___ Limited-slip differential oil (Land Cruiser, 4WD RAV4)<sup>1</sup></li> <li>___ Rear differential oil (all models except 2WD RAV4)</li> <li>___ Steering gear box</li> <li>___ Steering wheel, linkage and boots</li> </ul> |
| <b>Additional Maintenance Items for Special Operating Conditions:*</b> <ul style="list-style-type: none"> <li><input type="checkbox"/> Inspect automatic transmission fluid (Land Cruiser, RAV4, Tacoma, 4Runner)</li> <li><input type="checkbox"/> Inspect engine air filter</li> <li><input type="checkbox"/> Inspect front differential oil (2WD and 4WD RAV4)</li> <li><input type="checkbox"/> Inspect nuts and bolts on chassis and body</li> <li><input type="checkbox"/> Replace automatic transmission fluid (Tundra)</li> <li><input type="checkbox"/> Replace front differential oil (all 4WD except RAV4)</li> <li><input type="checkbox"/> Replace rear differential oil (including limited-slip)</li> </ul>   |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |



<sup>1</sup> If vehicle is equipped with limited-slip differential.

# Maintenance Log: SUVs & Trucks

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**55,000 Miles or 44 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- Ball joints and dust covers
- Brake linings/drums and brake pads/discs
- Drive shaft boots
- Rotate tires
- Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)
- Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

**50,000 Miles or 40 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- Ball joints and dust covers
- Brake linings/drums and brake pads/discs
- Drive shaft boots
- Rotate tires
- Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)
- Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

**52,500 Miles or 42 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

Date: \_\_\_\_\_ Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

|  |
|--|
| <b>60,000 Miles or 48 Months</b>   |
| <b>60,000 Miles or 48 Months</b>   |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace limited-slip differential oil (Land Cruiser, RAV4) <sup>1</sup><br><input type="checkbox"/> Replace platinum spark plugs (RAV4) <sup>2</sup><br><input type="checkbox"/> Replace non-platinum spark plugs (Tacoma, Tundra, 4Runner) <sup>3</sup><br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Lubricate wheel bearings (Tacoma 2WD)<br><input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>— Ball joints and dust covers</li> <li>— Brake lines and hoses</li> <li>— Brake linings/drums and brake pads/discs</li> <li>— Charcoal canister<sup>3</sup></li> <li>— Drive belts<sup>4</sup></li> <li>— Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>— Engine valve clearance</li> <li>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> </ul> |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Rotate tires<br><input type="checkbox"/> Replace limited-slip differential oil (Land Cruiser, RAV4) <sup>1</sup><br><input type="checkbox"/> Replace platinum spark plugs (RAV4) <sup>2</sup><br><input type="checkbox"/> Replace non-platinum spark plugs (Tacoma, Tundra, 4Runner) <sup>3</sup><br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Lubricate wheel bearings (Tacoma 2WD)<br><input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>— Exhaust pipes and mountings</li> <li>— Front differential oil</li> <li>— Fuel tank cap gasket</li> <li>— Rear differential oil (all models except 2WD RAV4)</li> <li>— Steering gear box</li> <li>— Steering wheel, linkage and boots</li> <li>— Transfer case oil (4WD models)</li> <li>— Transmission fluid or oil</li> </ul>  |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace front differential oil (2WD RAV4 and all 4WD)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)<br><input type="checkbox"/> Replace transmission fluid or oil   |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



<sup>1</sup> If vehicle is equipped with limited-slip differential.  
<sup>2</sup> Required under the terms of the Emission Control Warranty.  
<sup>3</sup> Inspect at 60,000 miles or 72 months, whichever comes first. Required only for vehicles in California, Massachusetts and New York.  
<sup>4</sup> Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

# Maintenance Log: SUVs & Trucks

**5,000-Mile Maintenance Intervals**

**7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**65,000 Miles or 52 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**70,000 Miles or 56 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**67,500 Miles or 54 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

## Maintenance Log: SUVs & Trucks

|   |
|---|
| <b>75,000 Miles or 60 Months</b>  |
| <b>75,000 Miles or 60 Months</b>  |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Automatic transmission fluid (Tundra)     ___ Front differential oil (all 4WD except RAV4)</li> <li>___ Ball joints and dust covers                     ___ Limited-slip differential oil</li> <li>___ Brake lines and hoses                             ___ (Land Cruiser, 4WD RAV4)<sup>1</sup></li> <li>___ Brake linings/drums and brake pads/discs     ___ Rear differential oil (all models except 2WD RAV4)</li> <li>___ Drive belts     ___ Steering gear box</li> <li>___ Drive shaft boots (all 4WD models and 2WD RAV4)     ___ Steering wheel, linkage and boots</li> <li>___ Exhaust pipes and mountings</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect automatic transmission fluid (Land Cruiser, RAV4, Tacoma, 4Runner)<br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect front differential oil (2WD and 4WD RAV4)<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid (Tundra)<br><input type="checkbox"/> Replace front differential oil (all 4WD except RAV4)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)  |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

# TOYOTA

## GENUINE PARTS

<sup>1</sup> If vehicle is equipped with limited-slip differential.

# Maintenance Log: SUVs & Trucks

**5,000-Mile Maintenance Intervals**

**7,500-Mile Maintenance Intervals**

To determine the appropriate maintenance interval for your vehicle, see page 17.

**80,000 Miles or 64 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**85,000 Miles or 68 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**82,500 Miles or 66 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

|   |
|---|
| <b>90,000 Miles or 72 Months</b>  |
| <b>90,000 Miles or 72 Months</b>  |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace limited-slip differential oil (Land Cruiser) <sup>1</sup><br><input type="checkbox"/> Replace non-platinum spark plugs (Tacoma, Tundra, 4Runner) <sup>2</sup><br><input type="checkbox"/> Replace timing belt (except 4-cyl. Tacoma and 4Runner)<br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Lubricate wheel bearings (Tacoma 2WD)<br><input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>— Ball joints and dust covers</li> <li>— Brake lines and hoses</li> <li>— Brake linings/drums and brake pads/discs</li> <li>— Drive belts</li> <li>— Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>— Exhaust pipes and mountings</li> <li>— Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>— Front differential oil</li> <li>— Fuel tank cap gasket</li> <li>— Limited-slip differential oil (4WD RAV4)<sup>1</sup></li> <li>— Rear differential oil (all models except 2WD RAV4)</li> <li>— Steering gear box</li> <li>— Steering wheel, linkage and boots</li> <li>— Transfer case oil (4WD models)</li> <li>— Transmission fluid or oil</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace front differential oil (2WD RAV4 and all 4WD)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)<br><input type="checkbox"/> Replace transmission fluid or oil  |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



<sup>1</sup> If vehicle is equipped with limited-slip differential.  
<sup>2</sup> Required under the terms of the Emission Control Warranty.

# Maintenance Log: SUVs & Trucks

## 5,000-Mile Maintenance Intervals

## 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**95,000 Miles or 76 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**100,000 Miles or 80 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Rotate tires

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**97,500 Miles or 78 Months**

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

|   |
|---|
| <b>105,000 Miles or 84 Months</b>   |
| <b>105,000 Miles or 84 Months</b>   |
| <input type="checkbox"/> Replace engine oil and oil filter<br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Automatic transmission fluid (Tundra) — Front differential oil (all 4WD except RAV4)</li> <li>___ Ball joints and dust covers — Limited-slip differential oil (Land Cruiser, 4WD RAV4)<sup>1</sup></li> <li>___ Brake lines and hoses — Rear differential oil (all models except 2WD RAV4)</li> <li>___ Brake linings/drums and brake pads/discs — Steering gear box</li> <li>___ Drive belts — Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>___ Drive shaft boots (all 4WD models and 2WD RAV4) — Steering wheel, linkage and boots</li> <li>___ Exhaust pipes and mountings</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect automatic transmission fluid (Land Cruiser, RAV4, Tacoma, 4Runner)<br><input type="checkbox"/> Inspect engine air filter<br><input type="checkbox"/> Inspect front differential oil (2WD and 4WD RAV4)<br><input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace automatic transmission fluid (Tundra)<br><input type="checkbox"/> Replace front differential oil (all 4WD except RAV4)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)  |

|                             |                |
|-----------------------------|----------------|
| DEALER SERVICE VERIFICATION | Date: _____    |
|                             | Mileage: _____ |



<sup>1</sup> If vehicle is equipped with limited-slip differential.

# Maintenance Log: SUVs & Trucks

- 5,000-Mile Maintenance Intervals
- 7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

**110,000 Miles or 88 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**115,000 Miles or 92 Months**

Replace engine oil and oil filter

**Additional Maintenance Items for Special Operating Conditions:\***

Inspect the following:

- \_\_\_ Ball joints and dust covers
- \_\_\_ Brake linings/drums and brake pads/discs
- \_\_\_ Drive shaft boots
- \_\_\_ Rotate tires
- \_\_\_ Engine air filter
- \_\_\_ Nuts and bolts on chassis and body
- \_\_\_ Steering wheel, linkage and boots

Lubricate propeller shaft and re-torque bolt (all 4WD except RAV4)

Re-torque drive shaft bolt (4WD RAV4)

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

**112,500 Miles or 90 Months**

DEALER SERVICE VERIFICATION

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

\* Specific services apply to specific operating conditions. See pages 18–19 for details.

# Maintenance Log: SUVs & Trucks

|   |
|---|
| <b>120,000 Miles or 96 Months</b>   |
| <b>120,000 Miles or 96 Months</b>   |
| <input type="checkbox"/> Replace engine air filter<br><input type="checkbox"/> Replace engine coolant<br><input type="checkbox"/> Replace limited-slip differential oil (Land Cruiser, RAV4) <sup>1</sup><br><input type="checkbox"/> Replace spark plugs (all models) <sup>2</sup><br><input type="checkbox"/> Lubricate propeller shaft (all 4WD except RAV4)<br><input type="checkbox"/> Lubricate wheel bearings (Tacoma 2WD)<br><input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser)<br><input type="checkbox"/> Re-torque drive shaft bolt (4WD RAV4)<br><input type="checkbox"/> Re-torque propeller shaft bolt (all models except RAV4)<br><input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> <li>___ Ball joints and dust covers</li> <li>___ Brake lines and hoses</li> <li>___ Brake linings/drums and brake pads/discs</li> <li>___ Charcoal canister<sup>3</sup></li> <li>___ Drive belts</li> <li>___ Drive shaft boots (all 4WD models and 2WD RAV4)</li> <li>___ Engine valve clearance</li> <li>___ Exhaust pipes and mountings</li> <li>___ Front differential oil</li> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Rear differential oil (all models except 2WD RAV4)</li> <li>___ Steering gear box</li> <li>___ Steering wheel, linkage and boots</li> <li>___ Transfer case oil (4WD models)</li> <li>___ Transmission fluid or oil</li> </ul> |
| <p><b>Additional Maintenance Items for Special Operating Conditions:*</b></p> <input type="checkbox"/> Inspect nuts and bolts on chassis and body<br><input type="checkbox"/> Replace front differential oil (2WD RAV4 and all 4WD)<br><input type="checkbox"/> Replace rear differential oil (including limited-slip)<br><input type="checkbox"/> Replace transmission fluid or oil  |

DEALER SERVICE VERIFICATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



<sup>1</sup> If vehicle is equipped with limited-slip differential.  
<sup>2</sup> Required under the terms of the Emission Control Warranty.  
<sup>3</sup> Inspect at 120,000 miles or 144 months, whichever comes first. Required only for vehicles in California, Massachusetts and New York.

## Vehicle Identification

Model \_\_\_\_\_ Mileage at delivery \_\_\_\_\_

Body style \_\_\_\_\_ Key number \_\_\_\_\_

Model year \_\_\_\_\_ Selling dealership \_\_\_\_\_

In-service date \_\_\_\_\_ Selling dealership phone number \_\_\_\_\_

Vehicle identification number \_\_\_\_\_



TOYOTA | everyday



00400-02000-SMG3

Printed in U.S.A.  
1/00