

						N	[A]	INTI	EN.	200 ANC	E S	СНЕ	<b>EDU</b>	LE				
Service Operation										V7 Schee		of Se	rvic	es				
2002 V70	miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127
	km x 1000	12	24	36	48		72		96		120			156	168		192	204
	months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204
Engi	ne																	
PCV, inspect, clean nipple and hoses (Turbo Models Only)															X			
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
	Service Reminder Indicator (SRI),		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines, of for damage					X				X				X		X		X	
Fuel filter,	replace														X			
Exhaust system check for deleaks									X	X	X	X	X	X	X	X	X	X
Air filter ca replace*	rtridge/					X					X					X		
Spark plugs/ replace (All models except S40/V40)									X								X	
Spark plugs replace (S4 Only)							X						X					

Coolant level, check / adjust	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Battery, check fluid level, charge, mounting**		X		X		X		X		X		X		X		X	
Auxiliary drive belt, check								X									
Auxiliary drive belt, replace														X			
Timing belt & Tensioner, replace														X			

<sup>\*</sup> May be necessary to change more frequently when driving in dusty/dirty areas.

\*\* Check more frequently when driving in severe climates.

For service intervals beyond 150,000 miles, consult your authorized Volvo retailer.

For service	or service intervals beyond 150,000 miles, consult your authorized Volvo retailer.																	
Service Operation		Schedule of Services																
2002 V70	miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127
	km x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204
	months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204
Steering, and R Suspen	ear																	
Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Steering/front suspension, check									X	X	X	X	X	X	X	X	X	X
Rear susper check for w									X	X	X	X	X	X	X	X	X	X
Transmission, Driveshaft and Differential																		
Automatic transmissio level, check/adjus					X				X				X				X	
Bevel gear, inspection†			X		X		X		X		X		X		X		X	
Driveshaft	ioints.																	

check for wear/play				X	X	X	X	X	X	X	X	X	X
Driveshaft, check boots				X	X	X	X	X	X	X	X	X	X
Propeller shaft,													

